



CDE4320 Firmware Update Notice

Please check Build Number information first.


Path: Launcher → Settings → About

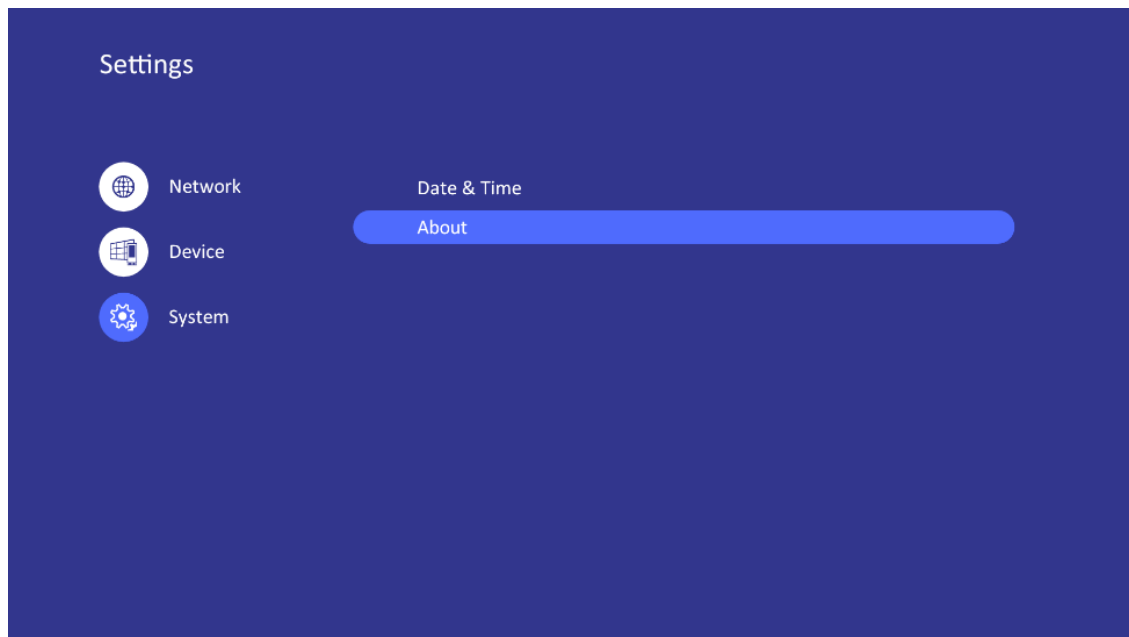

If your build number is "CDE4320", please download firmware from "CDE4320 Main Firmware" download link **(File name is : CDE4320 Main Firmware.zip)**

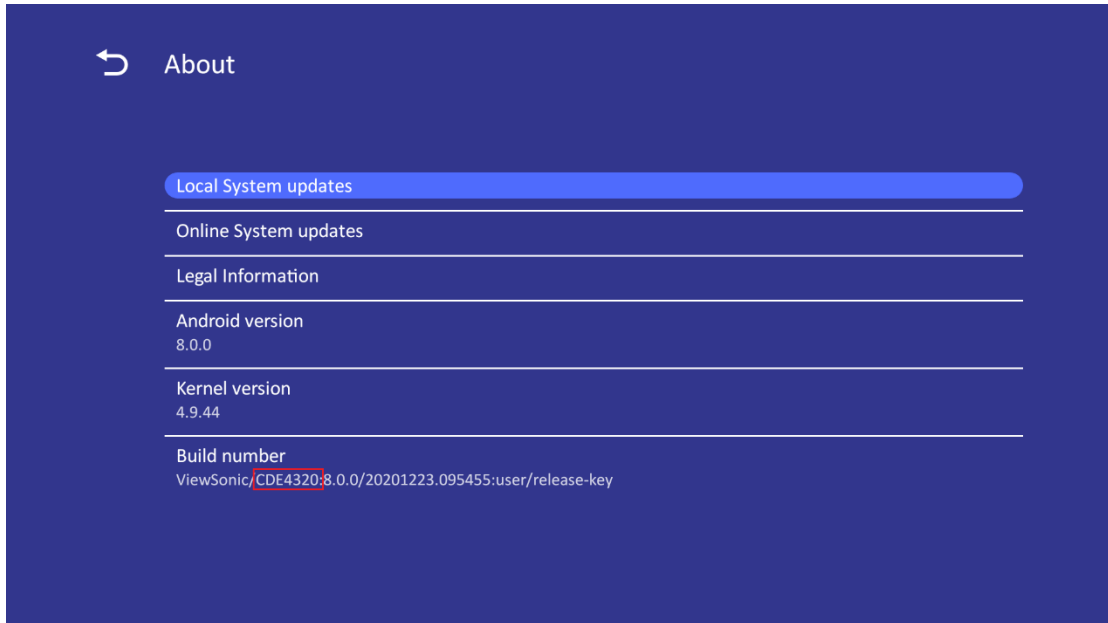

If your build number “CDE4320_BE2”, please download firmware from “CDE4320 (BE2) Main Firmware” download link. **(File name is : CDE4320 (BE2) Main Firmware.zip)**

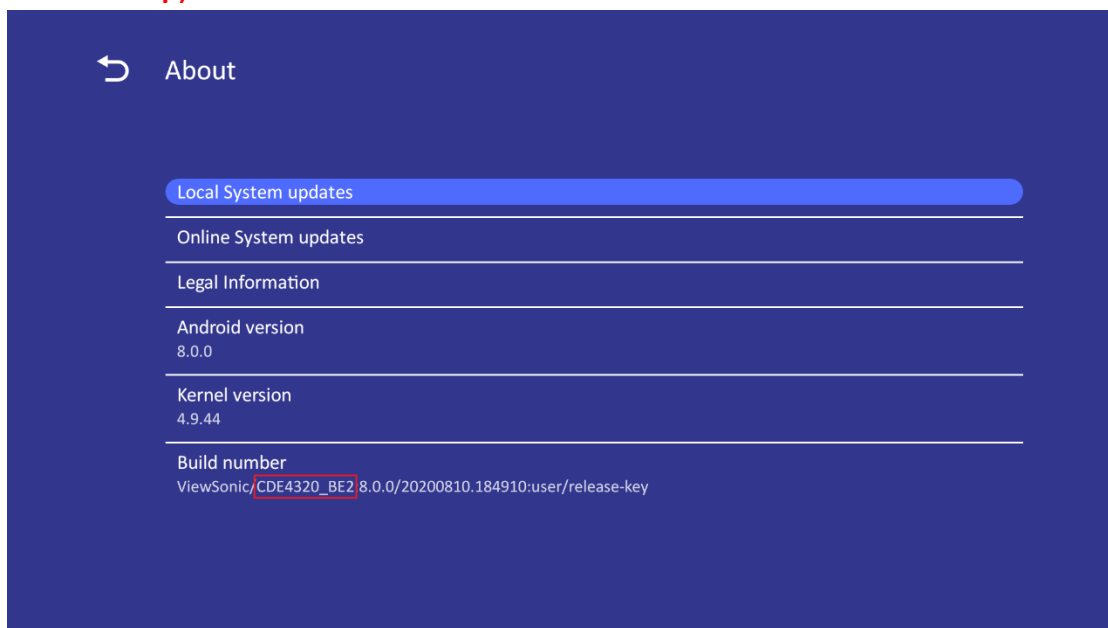

CDE4320 FW upgrade instruction

1. Debug Menu Upgrade Procedure (recommend)

Tools:

- (1) USB disk (Format FAT32) * 1 PCS.
- (2) Remote controller * 1 PCS.

Procedure:

- (1) Format the USB disk as FAT32.
- (2) Extract upgrade file to the U disk (FAT32 format) in the root directory. You will get "MstarUpgrade_848.bin".
- (3) Insert USB disk into the USB port of the TV board.
- (4) Turn on the panel. Press "Input 991" with remote controller, and then the debug menu will pop up.
Select Upgrade-> Upgrade All, press "Enter", and confirm.

2. Power Key Upgrade Procedure

Tools:

USB disk (Format FAT32) * 1PCS.

Procedure

- (1) Format the USB disk as FAT32.
- (2) Extract .zip file (after unzip you can found "MstarUpgrade_848.bin" file) and copy "MstarUpgrade_848.bin" file to U disk (FAT32) in the root directory.
- (3) Insert USB disk into the USB port of the TV board.
- (4) Press the POWER key to turn on the display and hold it for 6 seconds until the power LED twinkles in red and blue.
- (5) The display will upgrade first. When finished, the screen will reboot automatically. It will take 3 minutes to complete the upgrade procedure.