



# CDE4320 Firmware Update SOP

Please check Build Number information first.

Path: Launcher → Settings → About

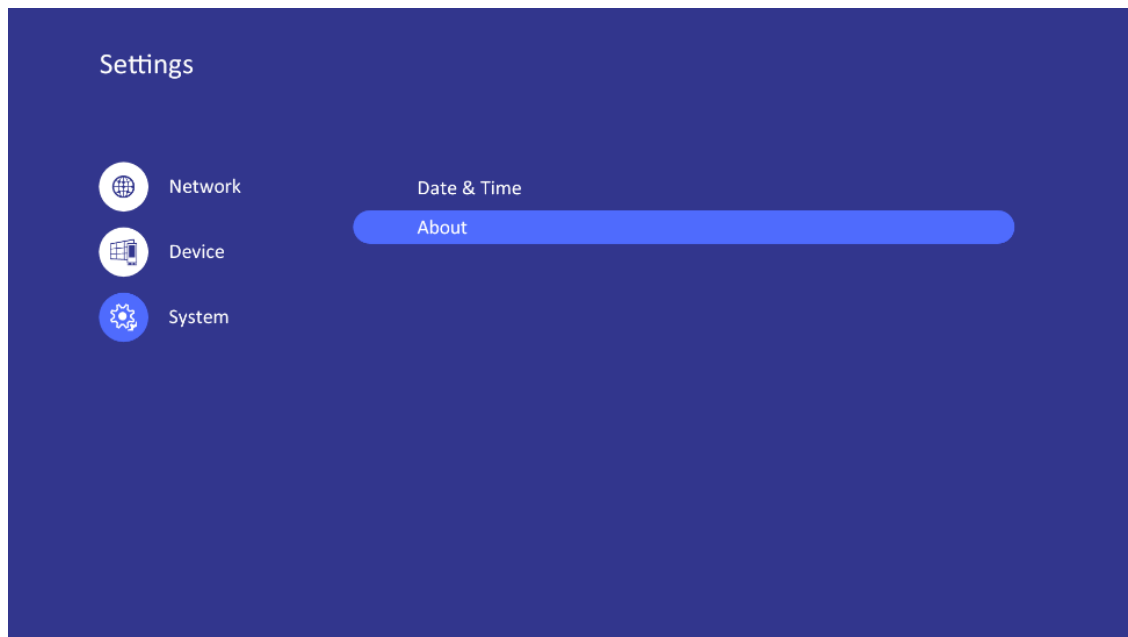

If your build number is "CDE4320" like below picture, please download **CDE4320 Main Firmware xxxxxxxx.xxxxxx.zip** firmware image (xxxxxxx.xxxxxx mean FW version)

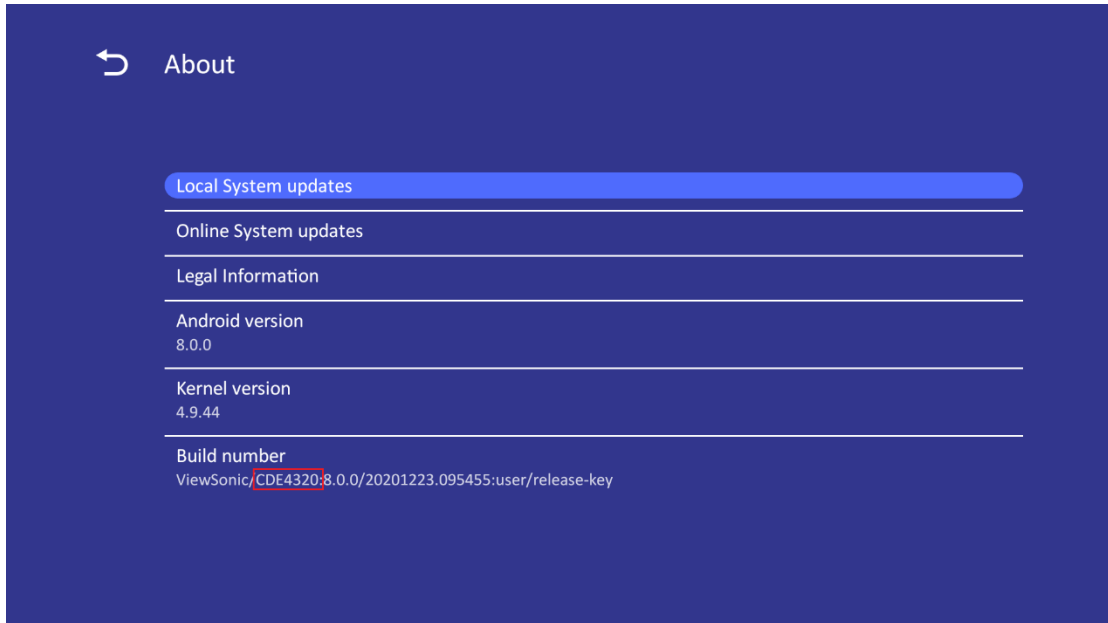

If your build number “CDE4320\_BE2” like below picture, please download firmware **CDE4320 BE2 Main Firmware xxxxxxxx.xxxxxx.zip (xxxxxxx.xxxxxx mean FW version)**



If your build number "CDE4320\_BE3" like below picture, please download firmware **CDE4320 BE3 Main Firmware xxxxxxxx.xxxxxx.zip (xxxxxxx.xxxxxx mean FW version)**



## CDE4320 FW upgrade instruction

### 1. Debug Menu Upgrade Procedure (recommend)

Tools:

- (1) USB disk (Format FAT32) \* 1 PCS.
- (2) Remote controller \* 1 PCS.

Procedure:

- (1) Format the USB disk as FAT32.
- (2) Extract upgrade file to the U disk (FAT32 format) in the root directory. You will get "MstarUpgrade\_848.bin".
- (3) Insert USB disk into the USB port of the TV board.
- (4) Turn on the panel. Press "Input 991" with remote controller, and then the debug menu will pop up.  
Select Upgrade-> Upgrade All, press "Enter", and confirm.

### 2. Power Key Upgrade Procedure

Tools:

USB disk ( Format FAT32 ) \* 1PCS.

Procedure

- (1) Format the USB disk as FAT32.
- (2) Extract .zip file (after unzip you can found "MstarUpgrade\_848.bin" file) and copy "MstarUpgrade\_848.bin" file to U disk (FAT32) in the root directory.
- (3) Insert USB disk into the USB port of the TV board.
- (4) Press the POWER key to turn on the display and hold it for 6 seconds until the power LED twinkles in red and blue.
- (5) The display will upgrade first. When finished, the screen will reboot automatically. It will take 3 minutes to complete the upgrade procedure.