

ViewSonic[®]




PX727-4K/PX747-4K

DLP Projector

How To Know My Firmware Version

How To Know My Firmware Version

Step 1. Open projector.

Step 2. Press information button “” on remote control or on key pad, then you get your Firmware Version on OSD Information below.

