ViewSonic®

# Slot in PC module NMP711/NMP712 (for CDE5560T/CDE6560T/ CDE7060T/CDE8451-TL/CDE5561T/ CDE6561T/CDE7061T/CDE8452T/ SWB5560B/SWB6560B/SWB7060B/ SWB8451-B/SWB5561B/SWB6561B/ SWB7061B/SWB8452B)

## Quick Start Guide

# 1. Interface

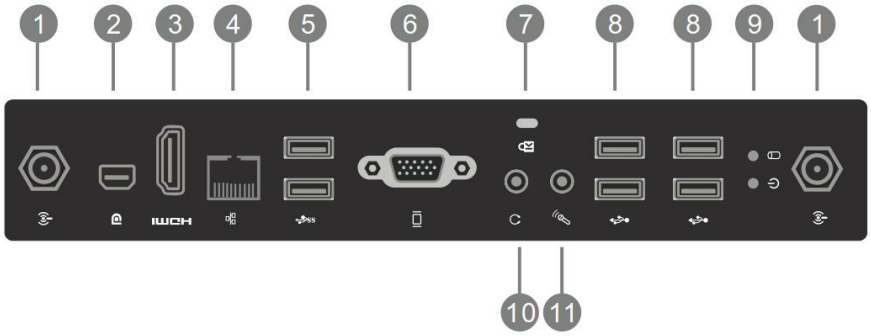


| Item | Description |
|---|---|
| 1 | WIFI antenna interface |
| 2 | Connects the display to a DisplayPort connector |
| 3 | Connected to device with HDMI input function |
| 4 | Standard RJ45 (10M/100M/1G) Internet connection interface (This network port is only used for PC) |
| 5 | USB 3.0 interface , connects USB peripherals such as HDDs USB key-boards and mice |
| 6 | Connects the display to a VGA-IN connector |
| 7 | Anti-theft lock |
| 8 | USB 2.0 interface , connects USB peripherals such as HDDs USB key-boards and mice |
| 9 | Working indicator light |
| 10 | Connects the device to headphones or speakers |
| 11 | Connects to a microphone |

# 2. Installation

# 3. Internet Connection

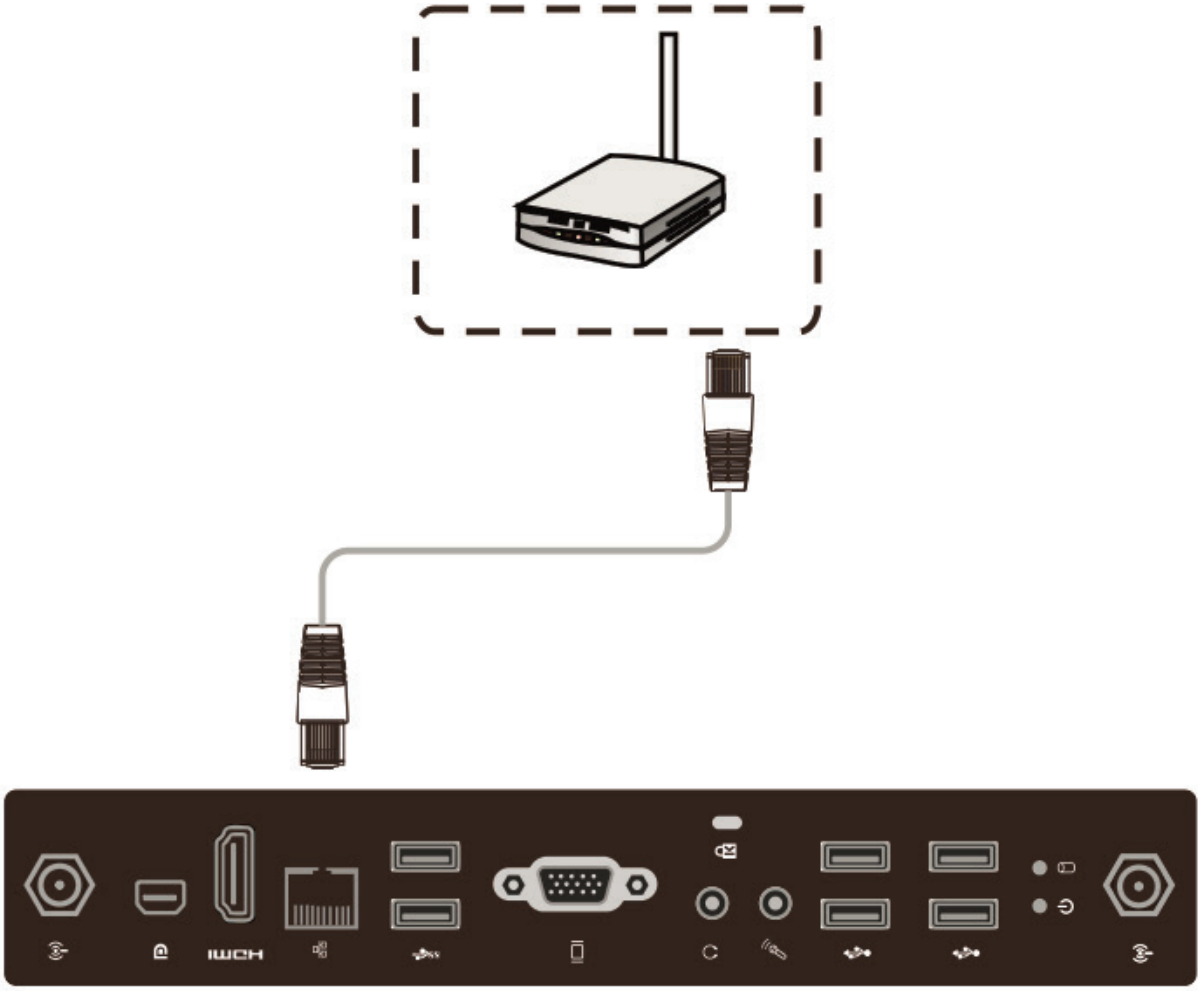

# 4. Input Selection

**(for CDE5560T/CDE6560T/CDE7060T/CDE8451-TL/SWB5560B/SWB6560B/SWB7060B/SWB8451-B)**

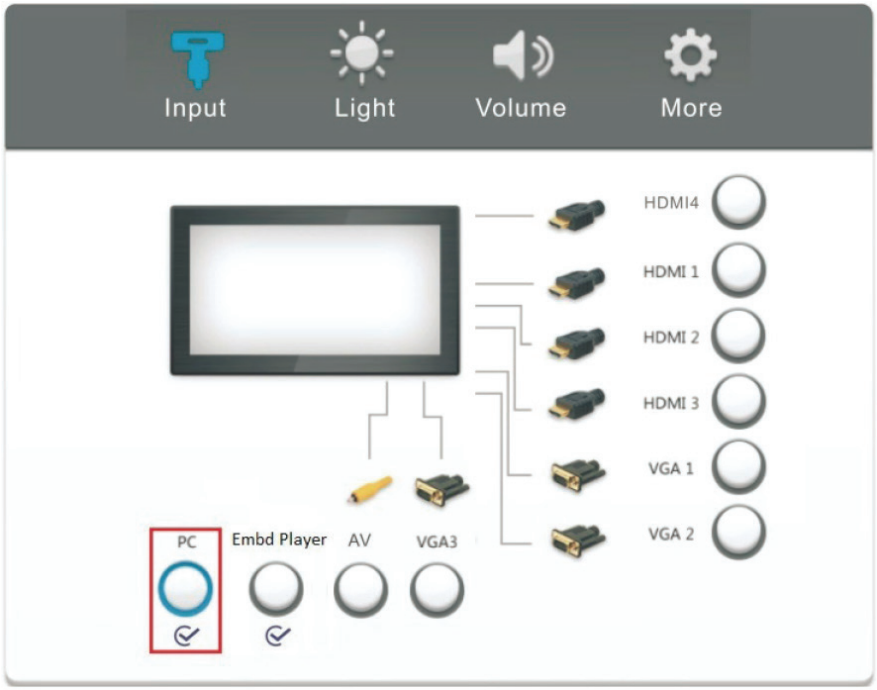


**(for CDE5561T/CDE6561T/CDE7061T/CDE8452T/SWB5561B/SWB6561B/SWB7061B/SWB8452B)**

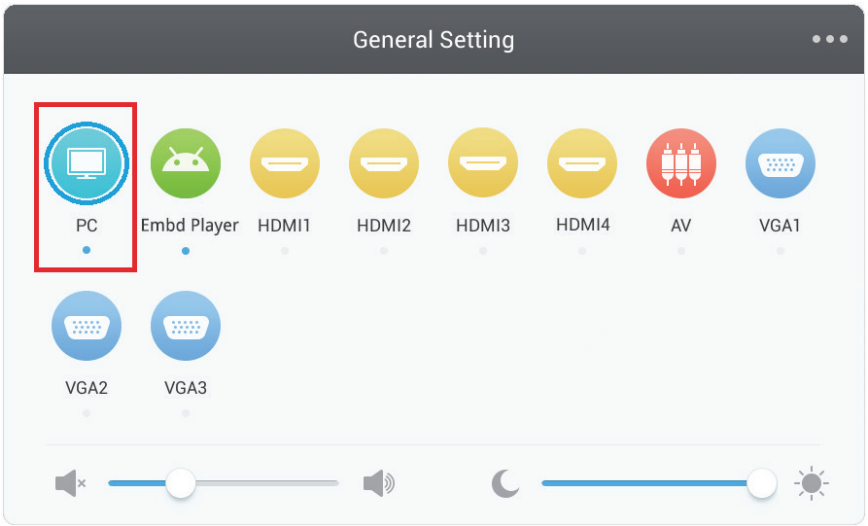


1. Press INPUT button on remote control to display the input setting menu, then press DOWN to enter the input source menu.
2. Press DOWN / UP / LEFT/ RIGHT to select PC.
3. Press Enter button on remote control or click with touch pen to select the input source.
4. Press EXIT key on remote control or click blank area outside menu with touch pen to quit the on-screen menu.

# 5. USB Connection

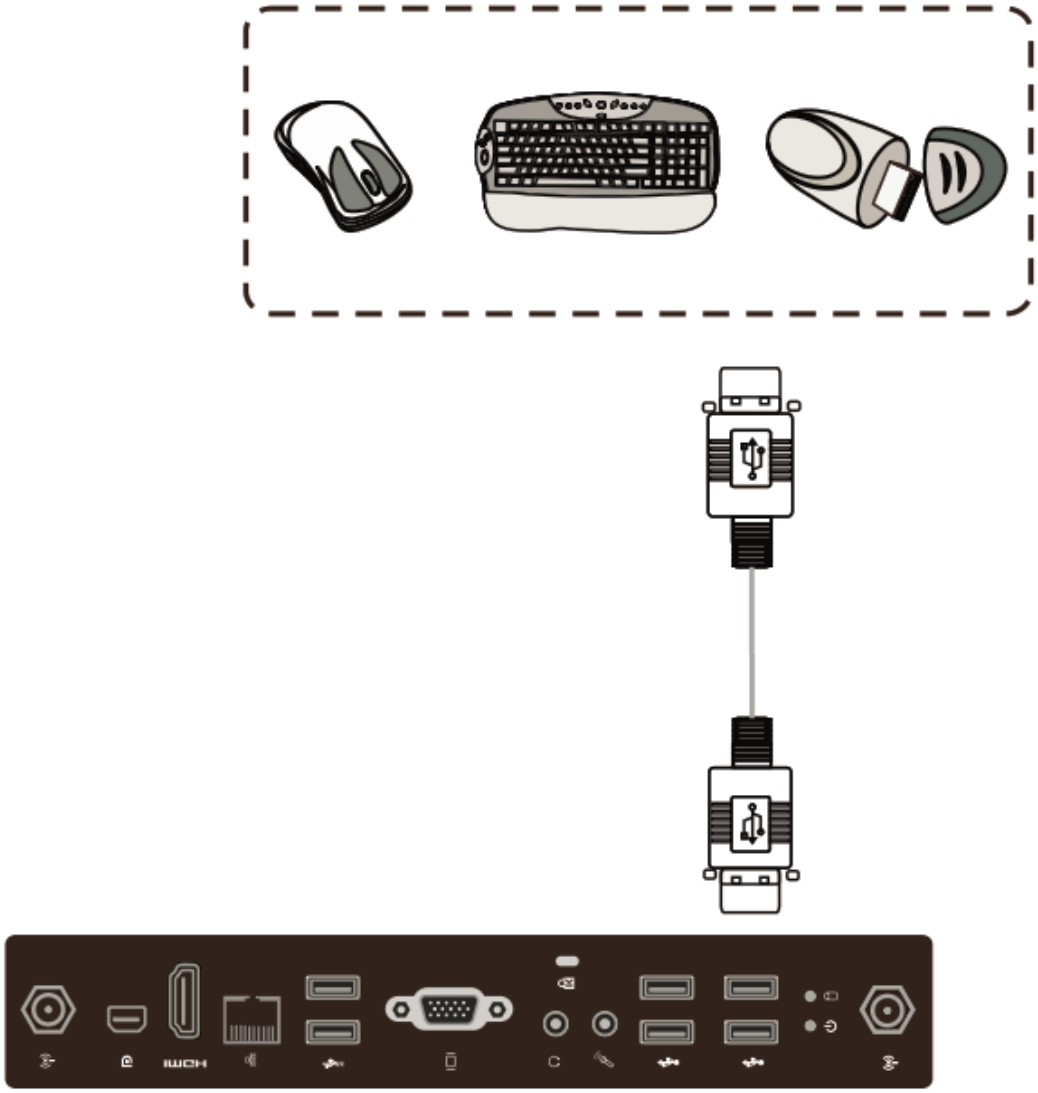

ViewSonic®