

ViewSonic®



EP1052T

Multimedia Digital Poster

User Guide

IMPORTANT: Please read this User Guide to obtain important information on installing and using your product in a safe manner, as well as registering your product for future service. Warranty information contained in this User Guide will describe your limited coverage from ViewSonic Corporation, which is also found on our web site at <http://www.viewsonic.com> in English, or in specific languages using the Regional selection box in the upper right corner of our website. "Antes de operar su equipo lea cuidadosamente las instrucciones en este manual"

Model No.

With over 25 years as a world leading provider of visual solutions, ViewSonic is dedicated to exceeding the world's expectations for technological evolution, innovation, and simplicity. At ViewSonic, we believe that our products have the potential to make a positive impact in the world, and we are confident that the ViewSonic product you have chosen will serve you well.

Once again, thank you for choosing ViewSonic !



Compliance Information

FCC Statement

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

For Canada

- This Class B digital apparatus complies with Canadian ICES-003.
- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CE Conformity for European Countries

CE The device complies with the EMC Directive 2004/108/EC and Low Voltage Directive 2006/95/EC.

Following information is only for EU-member states:

The mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE).

The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries or accumulators as unsorted municipal waste, but use the return and collection systems available.



If the batteries, accumulators and button cells included with this equipment, display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury or more than, 0.002% Cadmium, or more than 0.004% Lead.



Declaration of RoHS2 Compliance

This product has been designed and manufactured in compliance with Directive 2011/65/EU of the European Parliament and the Council on restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS2 Directive), and is deemed to comply with the maximum concentration values issued by the European Technical Adaptation Committee (TAC) as shown below:

Substance	Proposed Maximum Concentration	Actual Concentration
Lead (Pb)	0.1%	< 0.1%
Mercury (Hg)	0.1%	< 0.1%
Cadmium (Cd)	0.01%	< 0.01%
Hexavalent Chromium (Cr ⁶⁺)	0.1%	< 0.1%
Polybrominated biphenyls (PBB)	0.1%	< 0.1%
Polybrominated diphenyl ethers (PBDE)	0.1%	< 0.1%

Certain components of products as stated above are exempted under the Annex III of the RoHS2 Directives as noted below:

Examples of exempted components are:

1. Mercury in cold cathode fluorescent lamps and external electrode fluorescent lamps (CCFL and EEFL) for special purposes not exceeding (per lamp):
 - (1) Short length (≤ 500 mm): maximum 3.5 mg per lamp.
 - (2) Medium length (> 500 mm and $\leq 1,500$ mm): maximum 5 mg per lamp.
 - (3) Long length ($> 1,500$ mm): maximum 13 mg per lamp.
2. Lead in glass of cathode ray tubes.
3. Lead in glass of fluorescent tubes not exceeding 0.2% by weight.
4. Lead as an alloying element in aluminium containing up to 0.4% lead by weight.
5. Copper alloy containing up to 4% lead by weight.
6. Lead in high melting temperature type solders (i.e. lead-based alloys containing 85% by weight or more lead).
7. Electrical and electronic components containing lead in a glass or ceramic other than dielectric ceramic in capacitors, e.g. piezoelectronic devices, or in a glass or ceramic matrix compound.

Copyright Information

Copyright© ViewSonic Corporation, 2014. All rights reserved.

ViewSonic and the three birds logo are registered trademarks of ViewSonic Corporation.

Disclaimer: ViewSonic Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, ViewSonic Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

For Your Records

Product Name: EP1052T

ViewSonic Network Media Player

Model Number:

Document Number: EP1052T _UG_ENG 09-21-22

Serial Number: _____

Purchase Date: _____

Product disposal at end of product life

ViewSonic respects the environment and is committed to working and living green. Thank you for being part of Smarter, Greener Computing. Please visit ViewSonic website to learn more.

USA & Canada: <http://www.viewsonic.com/company/green/recycle-program/>

Europe: <http://www.viewsoniceurope.com/uk/support/recycling-information/>

Taiwan: <http://recycle.epa.gov.tw/recycle/index2.aspx>

Content

1. Introduction.....	1
1.1. Features	1
1.2. Package contents	1
1.3. Physical view and features.....	2
1.4. Mounting and Installation	3
2. Configuring the device	5
2.1. System connections.....	7
2.2. Basic settings.....	7
2.3. Connecting the device to your network	8
2.4. Time zone settings	12
2.5. Content settings.....	13
2.6. Player information.....	14
2.7. Content configuration – AppStart	15
2.8. Content configuration – FailSafe	16
2.9.	
2.10. Display settings.....	19
2.11. Sound settings	23
2.12. System configuration – Time Server	24
2.13. System configuration – Scheduled reboot.....	25
2.14. System configuration - Firmware upgrades.....	26
2.15. System configuration - Factory reset.....	27
2.16. System configuration – Power save	28
2.17. System configuration – Expand Storage by using micro SD card.....	28

3. Expansion Port Guide	32
3.1. Wiring Guide for Access Control	33
3.2. Expansion Port Connection for access control.....	34
4. Content Management	35
5. Authoring in HTML5	35
6. Working with SMIL.....	35
6.1. Introduction.....	35
6.2. www.a-smil.org for developers.....	35
7. Technical Data	36
7.1. Specifications.....	36
8. Troubleshooting	39

1. Introduction


1.1. Features

- 10.1" multi-touch all-in-one screen
- Interactive surround LED status light for status display
- Built-in dual-band wireless connection and giga-LAN Ethernet
- Industry leading HTML5 and W3C SMIL support for developers
- Built-in card reader, echo-cancellation microphone, and auto-focus camera
- Multiple 3rd party software solution compatibility
- Support for HTML5 widgets for dynamic content (W3C Widgets standard)
- Full-HD 1080p hardware decoding of MPEG, H.264, and VC-1 media formats, up to 4K hardware decoding of H.265
- 16GB on-board EMMC local storage with micro-SD card slot

1.2. Package contents



Room panel

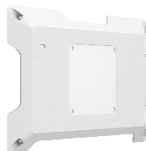

Flush wall
mount bracket
with screw



Glass mount
3M tape



Mount sheet



Cover sheet




Screws
M3 x 13
2 pcs &
1 spared
(For mounting at
top two corners of
flush mount)




Screws
M3 x 6
1 pc &
1 spared
(For mounting at
the top center of
flush mount)


1.3. Physical view and features

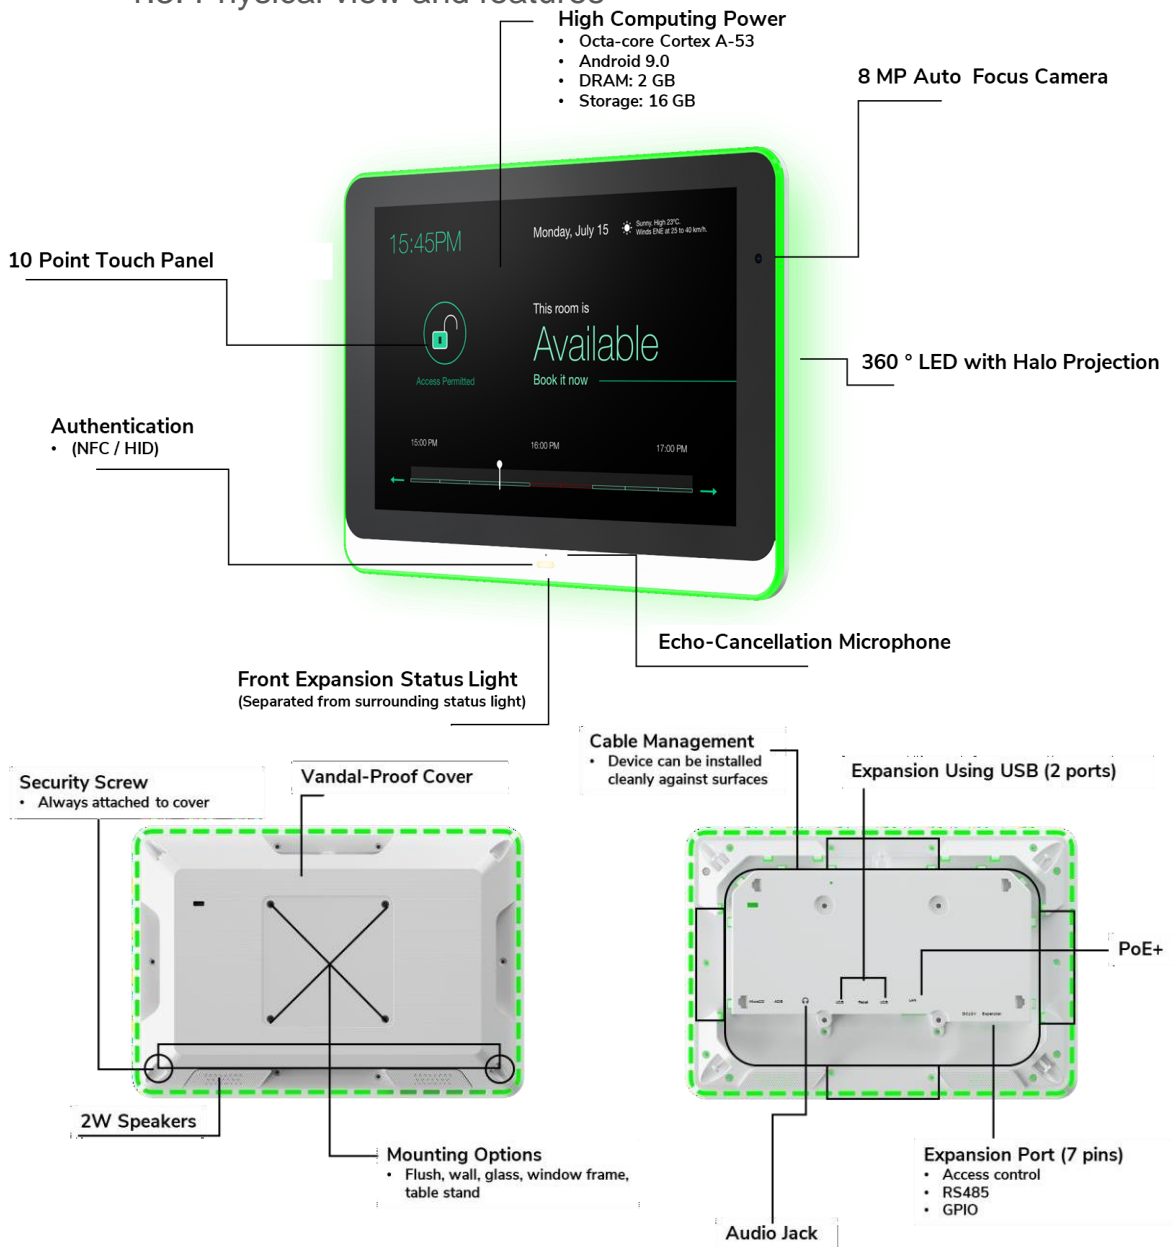

For Model EPT1052T -A, the best recommended NFC detection area as following:

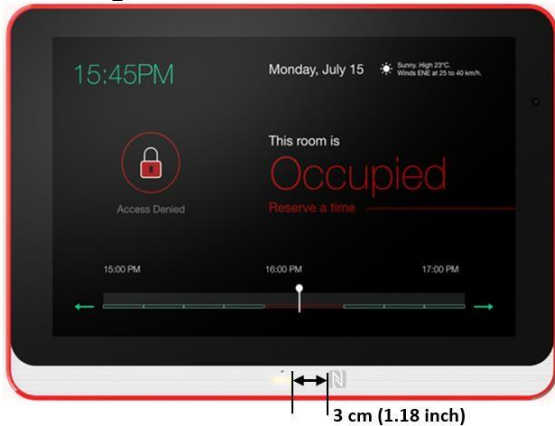

For Model EPT1052T -H, the best recommended NFC detection area as following:

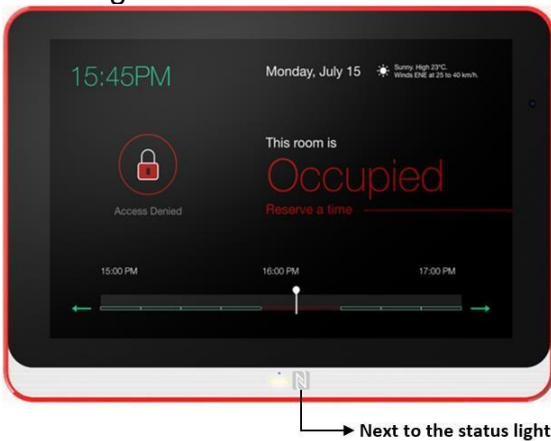

1.4. Mounting and Installation

Mounting with VESA compatible mounting interface


This room panel accepts a MIS-D (75 mm x 75 mm) VESA-Compliant mounting interface, and the recommended screw is M4 x 10 mm excluding bracket thickness.

Easy mounting

Fixing the screws from two corners at bottom of flush mount and the screw at the center top is a recommended procedure that is stable, easier, and faster when mounting the room panel.

Wall mounting with flush mount bracket and screw

Step 1




Paste the mount sheet on the wall

Step 2




Drill the four mounting holes

Step 3



Install the mounting plate using the four screws

Step 4




Plug in the required cables to the room panel

Step 5




Attach the room panel to the mounting plate

Step 6

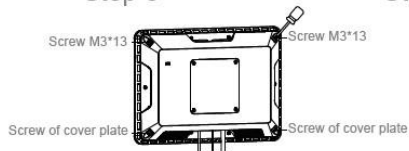

Lock the room panel to the mounting plate using a screw at each corner

Step 7

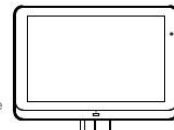

The room panel is ready to be brought online


Glass mounting with flush mount bracket and screw

Step 1




Paste sticker on the back of the mounting plate
Ensure the glass surface is clean and dry

Step 2




The mount sheet can be temporary fixed on the other side of the glass to locate the area for the cover sheet.

Step 3




1. Affix the cover sheet to the glass surface.
2. Align the mounting plate to the cover sheet with the kensington lock hole.

Step 4



Affix the mounting plate to the glass surface

Step 5




Plug in the required cables to the room panel

Step 6




Attach the room panel to the mounting plate

Step 7

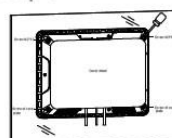


Lock the room panel to the mounting plate using a screw at each corner

Step 8

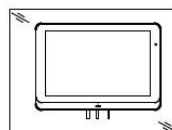

The room panel is ready to be brought online


Mounting close to window frame

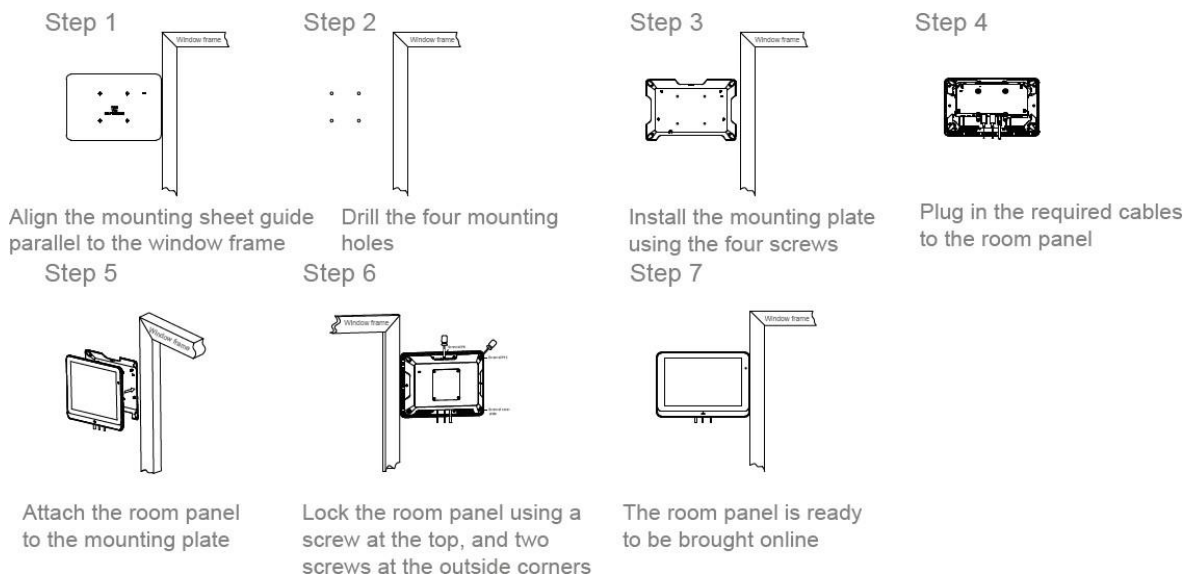


2. Configuring the device

2.1. System connections

1. Attach the AC power adapter to provide power to the unit. After approximately 35 seconds, booting animation will be displayed on the screen below as shown here:

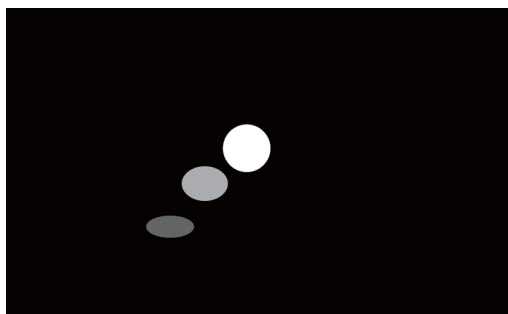

2. The player boot process takes approximately 60 seconds to complete. After boot up is complete, the digital poster will stay in the **Basic settings** menu if no content service has been configured (i.e. first boot up for a brand new unit or after a factory reset). Plug in a USB mouse to start configuring the digital poster. If you have already set content into the digital poster, contents will start playing back automatically 15 seconds after boot up.

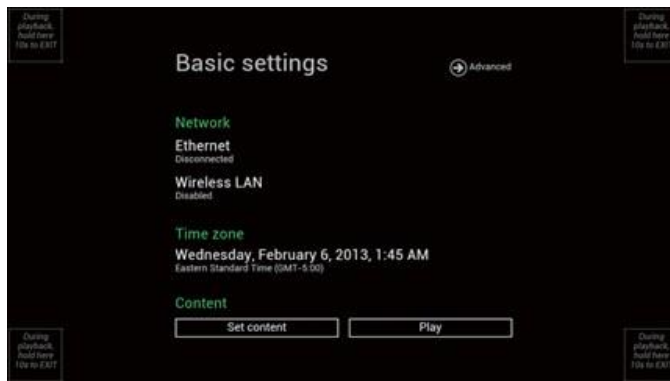


Note: To enter the menu system at any time during playback, plug in a USB mouse and hold the left mouse key in the corner area as shown below for 10 seconds.



* You will be asked for a password if a password has been pre-configured.

2.2. Basic settings

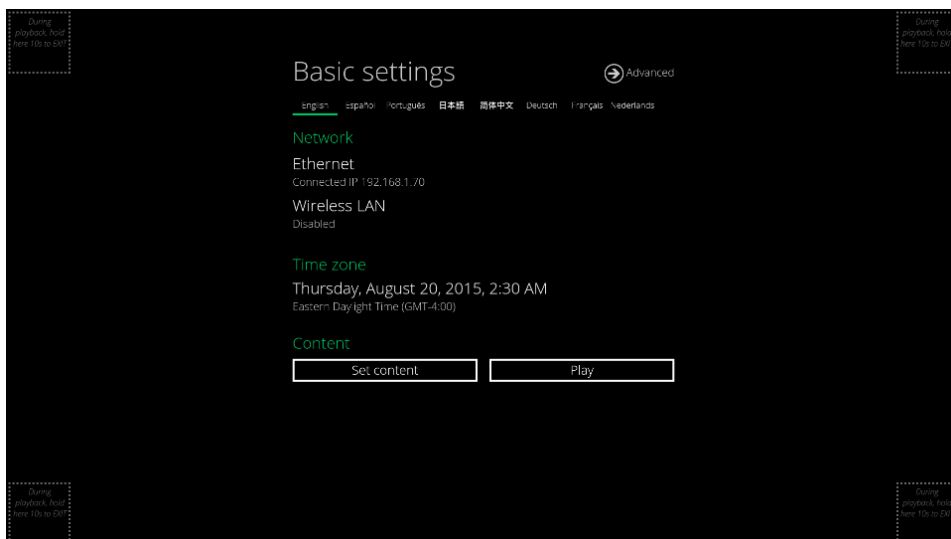

(Fig. 2.2.1)

Basic settings allow users to configure 3 important signage application settings: **Network**, **Time zone** and **Content**.

Each time the Basic settings menu is entered, the digital poster will start playback automatically after 15 seconds if content services have been set previously. Auto playback can be canceled by clicking on the button while it's counting down.

To enter the **Advanced Setting** menu, click the **Advanced** button.

2.3. Connecting the device to your network


Wireless connection

1. Click the **Wireless LAN** setting, and the wireless configuration UI will be launched.




(Fig. 2.3.1)

2. Click the **ON/OFF** button as indicated below to turn the Wireless interface on (Ethernet will be disconnected when the digital poster connects to a wireless network).

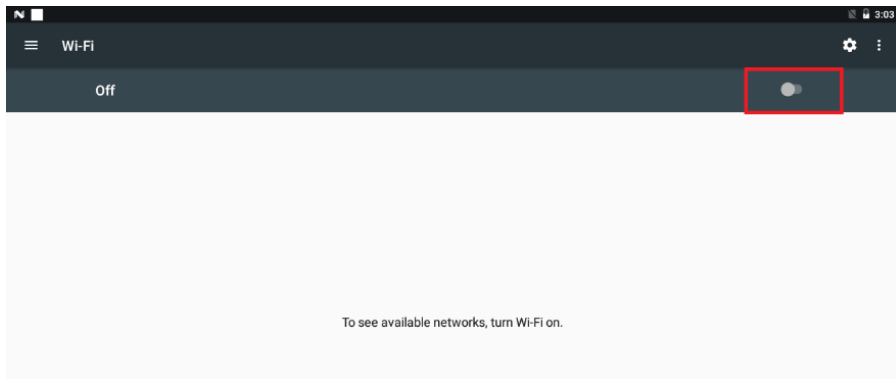


(Fig. 2.3.2)

3. The digital poster will scan for wireless signals nearby and available AP stations will be listed.

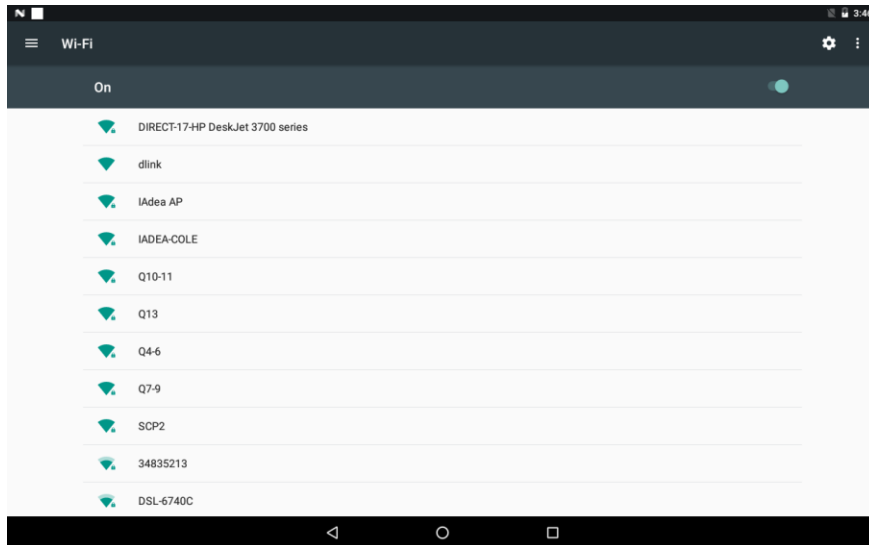

(Fig. 2.3.3)

4. Click on the station name to connect. If the network requires authentication, you will be asked to provide the password for access.

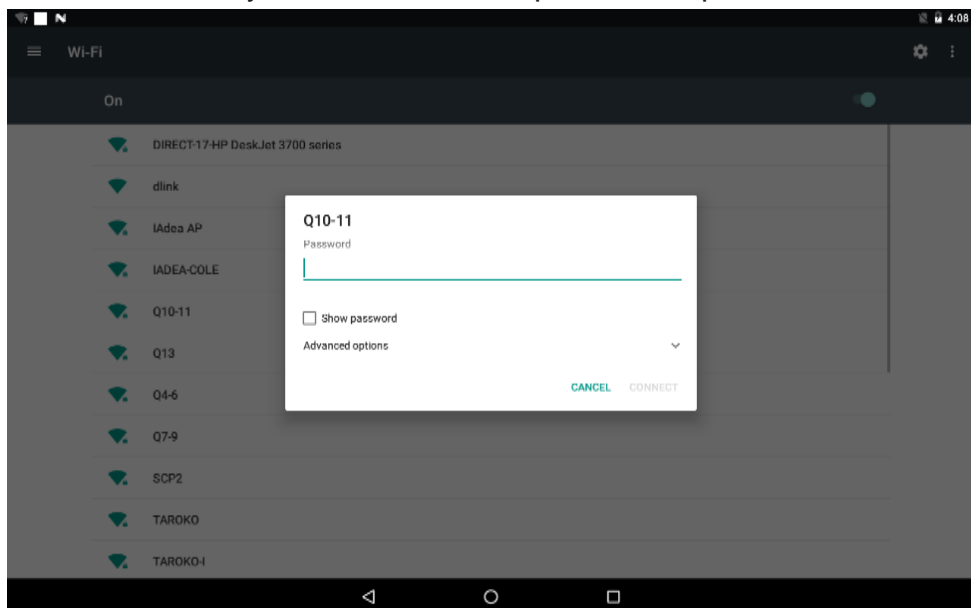

(Fig. 2.3.4)


Wired connection

To use the wired Ethernet connection, first connect an Ethernet cable then disable the Wireless LAN interface.

1. Click the **Wireless LAN** setting, the wireless configuration UI will be launched. (Fig. 2.3.1)
2. Click the **ON/OFF** button as indicated below to turn the Wireless interface off. (Fig. 2.3.2)

DHCP – automatically assign network IP address


3. Turn on the Ethernet interface. For DHCP environments, configuration will be finished in this step.

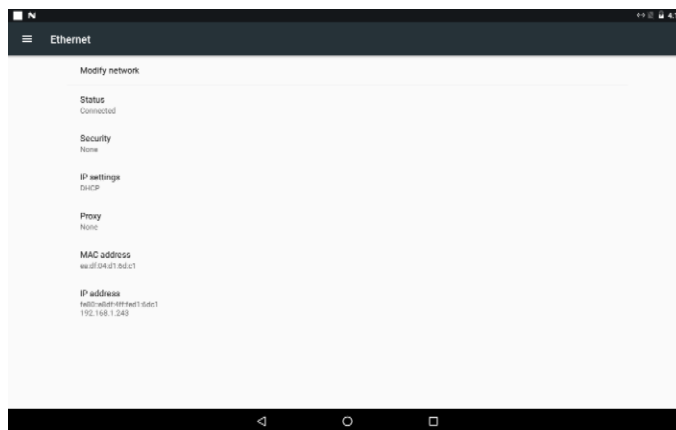

(Fig. 2.3.5)


Static IP – manually assign network IP address

4. Click **Modify Network** to make a static IP configuration.

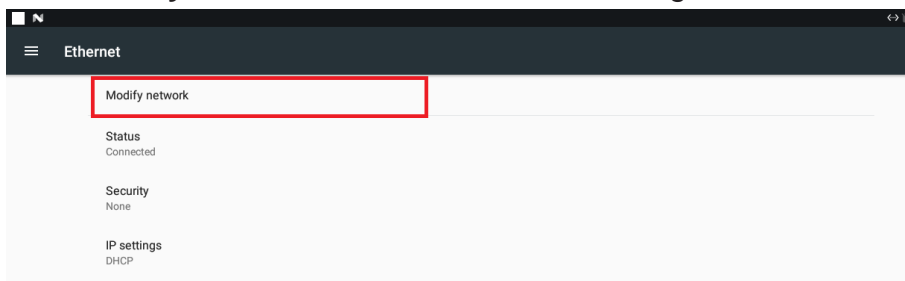

(Fig. 2.3.6)


5. Under IP settings, change DHCP to Static.

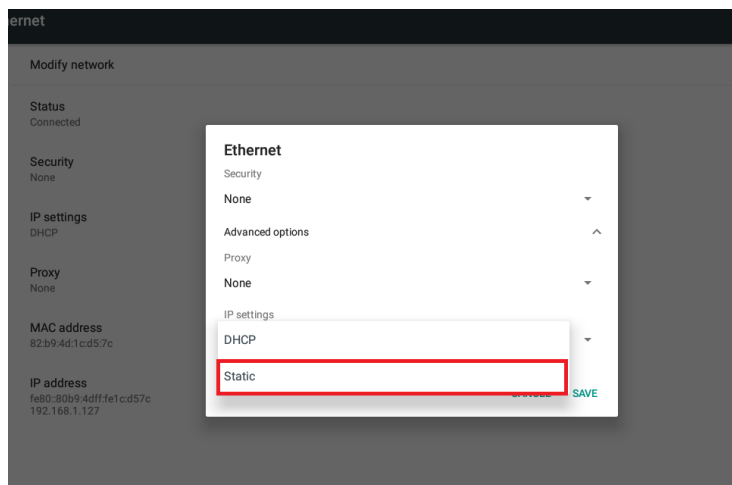

(Fig. 2.3.7)

6. Fill the form and click Connect to complete the setting.


(Scroll down/ swipe to see the rest of the menu if needed)

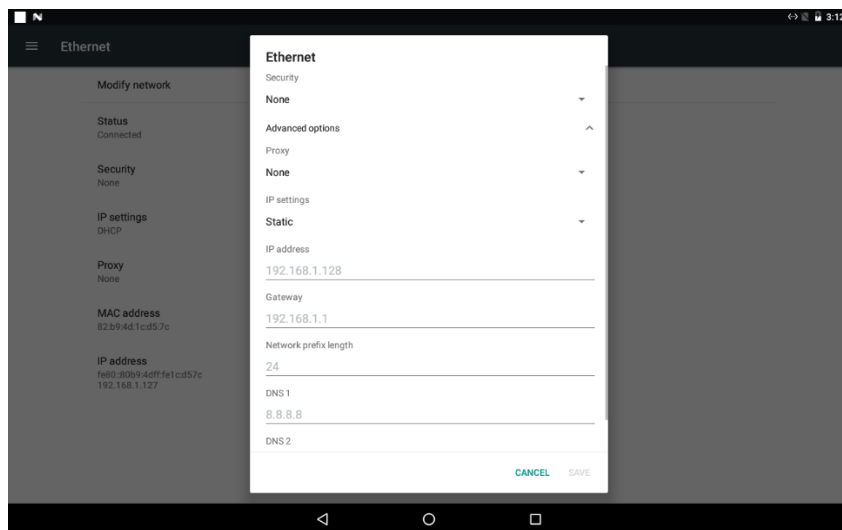

(Fig. 2.3.8)


2.4. Time zone settings

1. Click **Time zone** to launch the configuration menu.

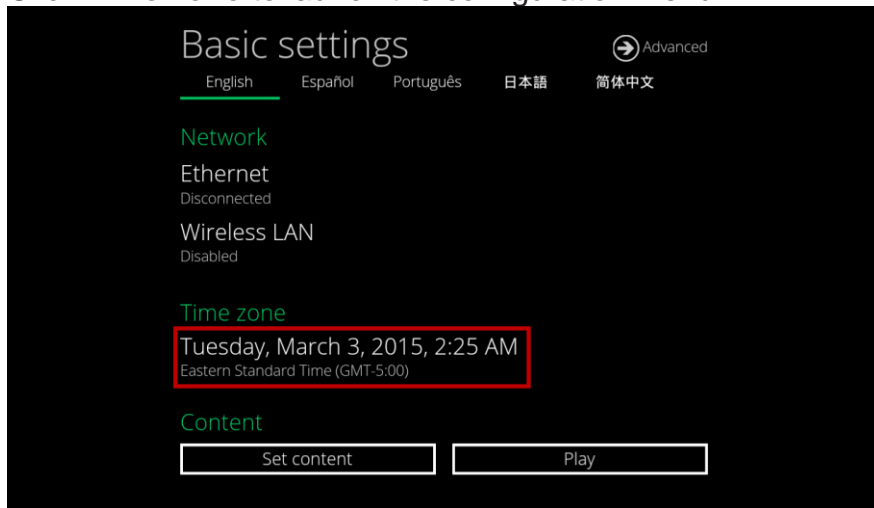


(Fig. 2.4.1)

2. Click **Select time zone**.

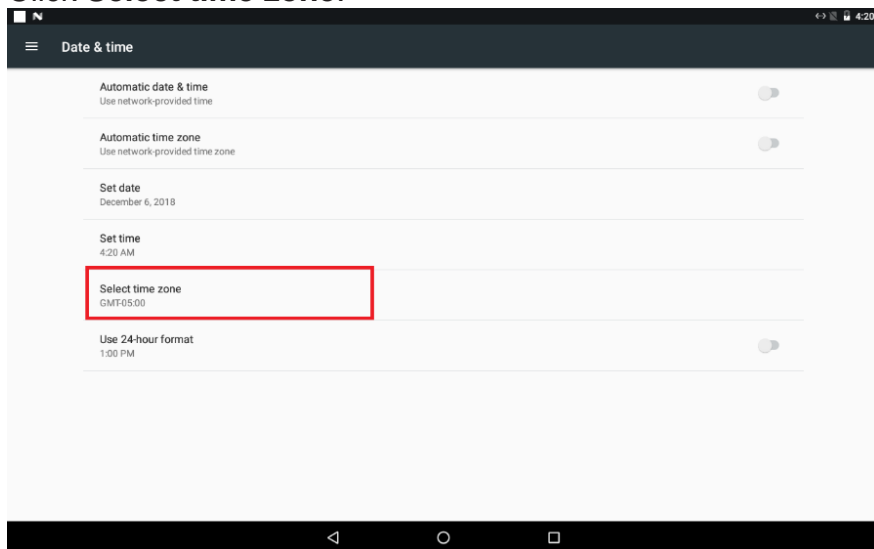

(Fig. 2.4.2)


3. Choose the correct time zone from the available options.

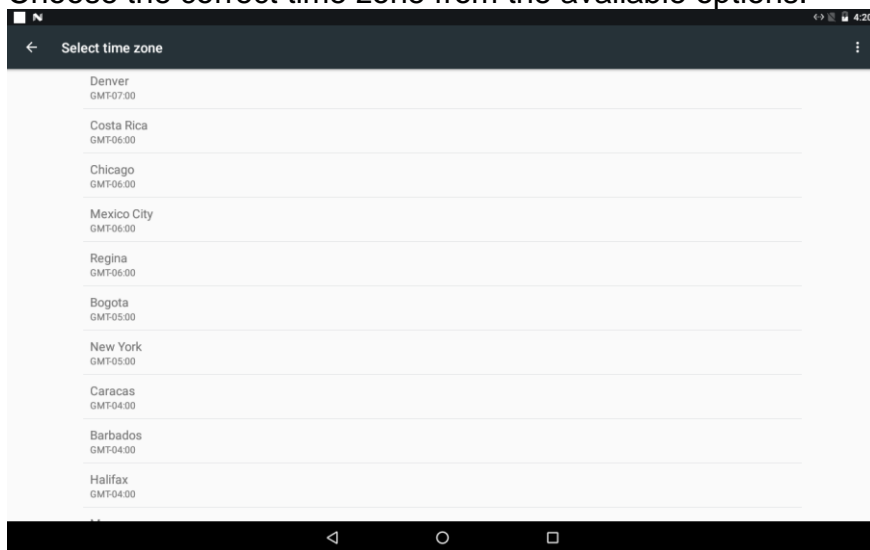

(Fig. 2.4.3)

2.5. Content settings

1. Click the **Set content** button to launch the configuration menu.

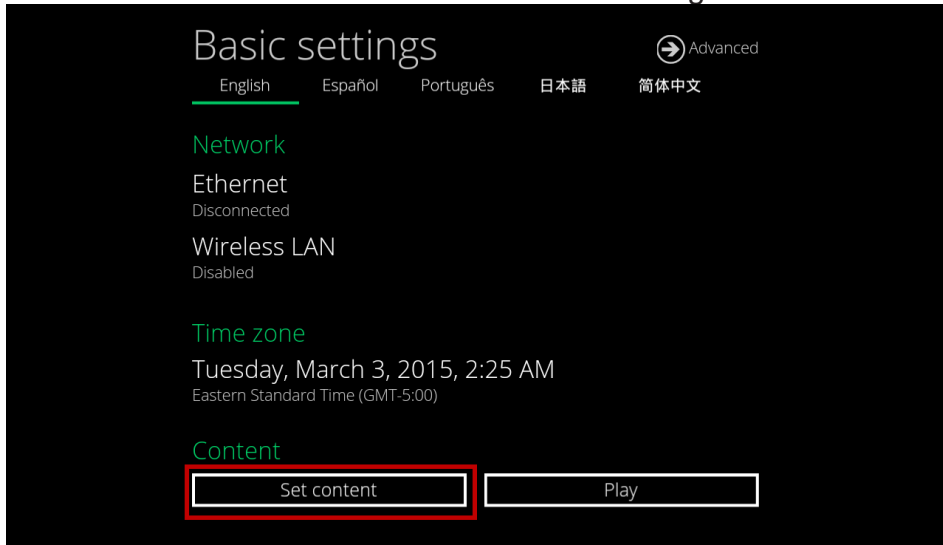

(Fig. 2.5.1)

2. **Input** the content source URL and click on **Connect**. The digital poster will start playback immediately.




(Fig. 2.5.2)

3. The player will check the availability of **SMIL/HTML5 content URL**, with the **Play** button showing **Checking...**

The checking action can be canceled by clicking **Checking...** button, it will change back to **Play**.


NOTE: It is highly recommended to let the player check the availability of the content URL. Clicking **Play** button with a bad/invalid URL set would cause the player to reboot, if the **FailSafe** function is not configured.

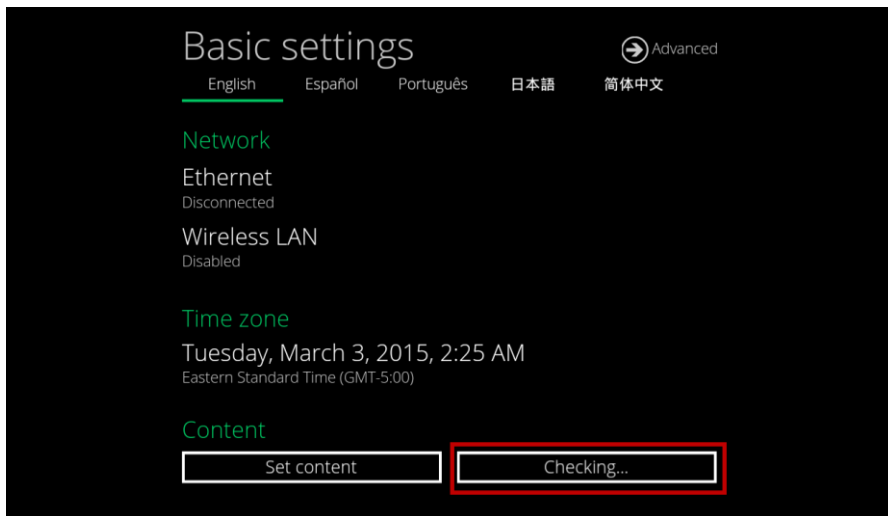

(Fig. 2.5.3)

4. If the **SMIL/HTML5 content URL** is available, the **Play** button will change to a 15-second countdown and the playback will start after the countdown. The countdown can be canceled by clicking the button.

If it keeps showing **Checking...** for a long time, please go back to **Set content** to check the correctness of the URL.

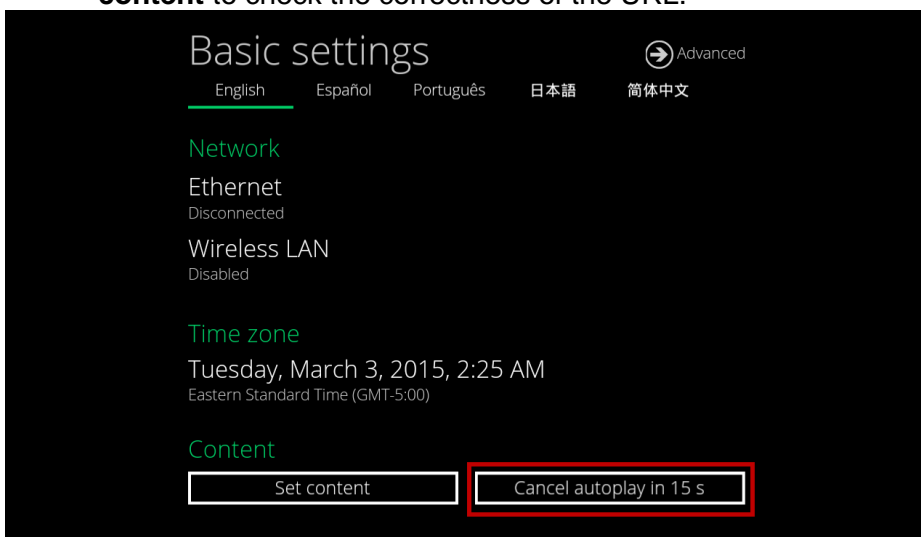


(Fig. 2.5.4)

2.6. Player information


From the digital poster you can check the basic information including **Health status**, **Firmware version** and **Player ID**.

1. Click **Advanced**, and the advanced configuration menu will be launched.

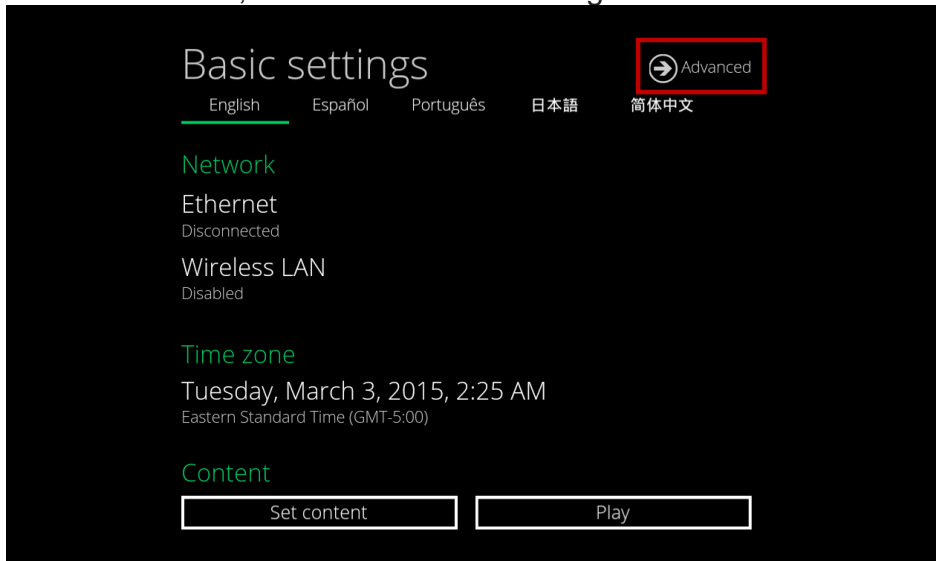

(Fig. 2.6.1)

2. Click on **Information** to view **Health Status** definitions:
Green – Normal > Device connection to the content source URL server is normal.
Blue – Local > Device is playing content from the USB drive or SD card.
Gray – Disconnected > Device is disconnected.

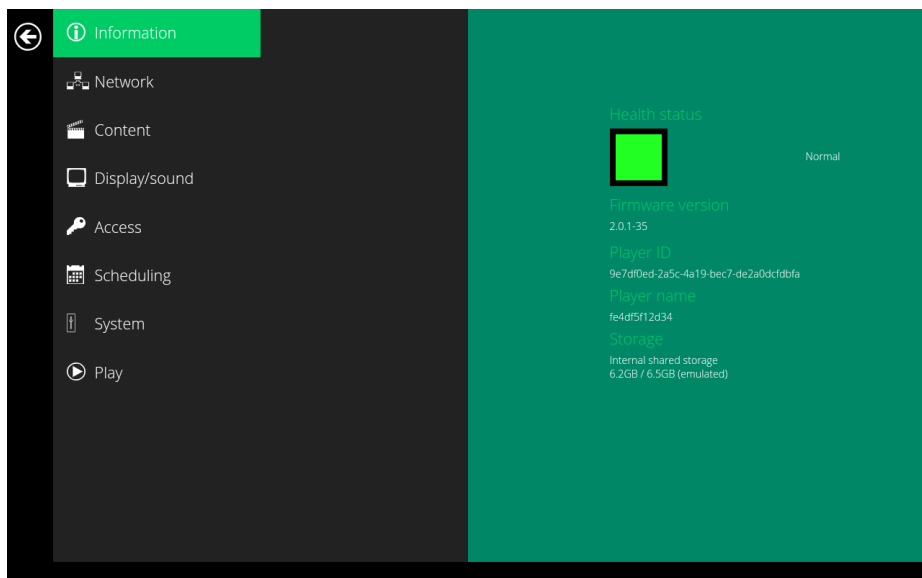

(Fig. 2.6.2)

2.7. Content configuration – AppStart

User can assign the URL and App after system start up.

1. Click on the **Advanced** button. The advanced configuration menu will be launched. (Fig. 2.6.1)
2. Click on **Content**, and then click **AppStart**.
3. Enter the valid URL of HTML/SMIL in AppStart. (Fig. 2.7.1)
4. Auto run can be disabled from here. Auto run will automatically be enabled when content is played.
In most cases, the network needs to be re-configured on site, so this prevents the device from starting playback automatically when powered up for the first time on-site.
5. The Advanced option is used for the 3rd-party App configurations only.
Trust: Switch to **Enabled** to set whether the content can access sensitive data: such as intent extras, client credentials, access token..., etc.
Desktop mode: Switch to **Enabled** to force player to play content in Desktop mode. Please note: not all the contents are created for Desktop mode, please ask your content provider for details.
Ignore certificate errors: Switch to **Enabled** to ignore the certificate on HTML5 contents; if there is a certificate on HTML5 content, it will cause a playback error.
Reload when network is reconnected: Switch to **Enabled** to reload web page as soon as network connection becomes available.
Trigger failover when network is disconnected: Switch to **Enabled** to load failover content when network is disconnected.

AppStart

URL

☒ Advanced

Package name

Class name

Action

Type

Additional packages

☐ Trust

☐ Force web application mode

☐ Desktop mode

☐ Ignore certificate errors

☐ Reload when network is reconnected

☐ Fail when network is disconnected

☐ Grant requests for runtime permissions


☐ Grant requests for USB permissions

(Fig. 2.7.1)

2.8. Content configuration – FailSafe

The URL and APP can also be assigned once the system has failed to play the assigned content.

1. Click on the Advanced button. The advanced configuration menu will be launched. (Fig. 2.6.1)
2. Click on **Content**, and then click on **FailSafe**.
3. Enter the URL of HTML/SMIL/Media RSS in FailSafe.
4. The Advanced option is used for the 3rd-party App configurations only.

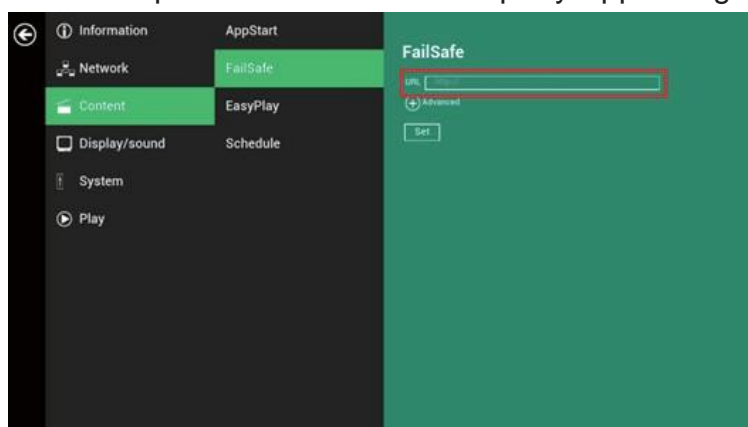


(Fig. 2.8.1)

2.9. Content configuration – USB Update

User can enable/disable updates to the playlist through USB storage drive.

1. Click on the **Advanced** button. The advanced configuration menu will be launched. (Fig. 2.6.1)
2. Click on **Content**, and then click on **USB Update**.
3. **Enabled:** If there is a SMIL folder in the USB drive that has been inserted to the player, the player will download the content to the internal storage and playback automatically.

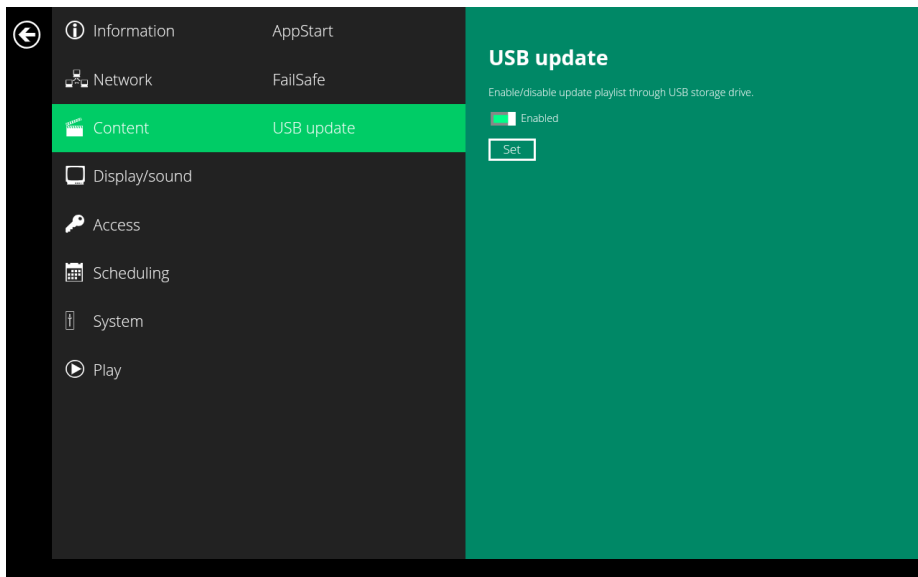


(Fig. 2.9.1)

2.10. Display settings

Brightness Level


The default brightness is set to maximum, and it can be adjusted in the Display settings.

1. Click on the **Advanced** button. The advanced configuration menu will be launched. (Fig. 2.6.1)
2. Click on the **Display/sound** button, and then click on **Display**. The Display Settings page will be launched. (Fig. 2.10.1)
3. Click on **Brightness Level**.

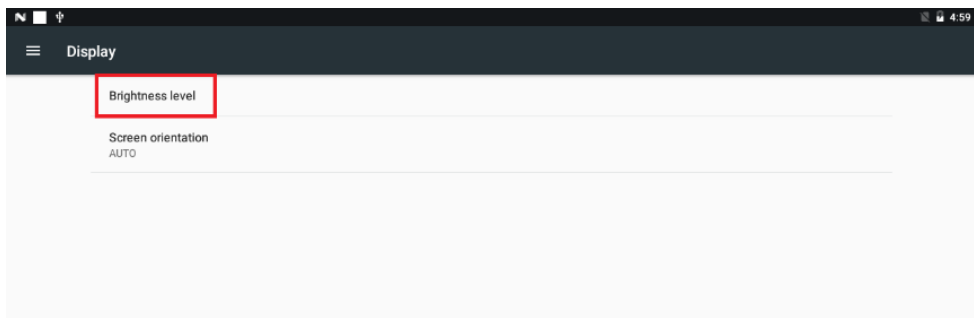

(Fig. 2.10.4)

4. Drag the gear toggle to adjust the brightness. Click on **OK** to save the configuration.

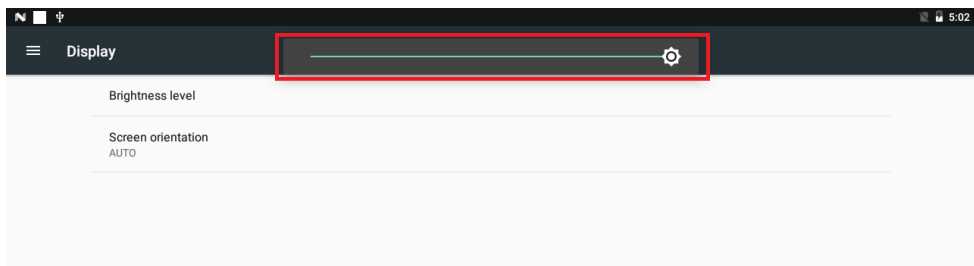


(Fig. 2.10.5)

Screen orientation


Screen orientation allows you to set the display to 90/180/270-degree rotation.

1. Click on the **Advanced** button. The advanced configuration menu will be launched. (Fig. 2.6.1)
2. Click on **Display/sound**, and then click on **Display**. The Display Settings page will be launched. (Fig. 2.10.1)
3. Click on **Screen orientation**, as marked in red below.

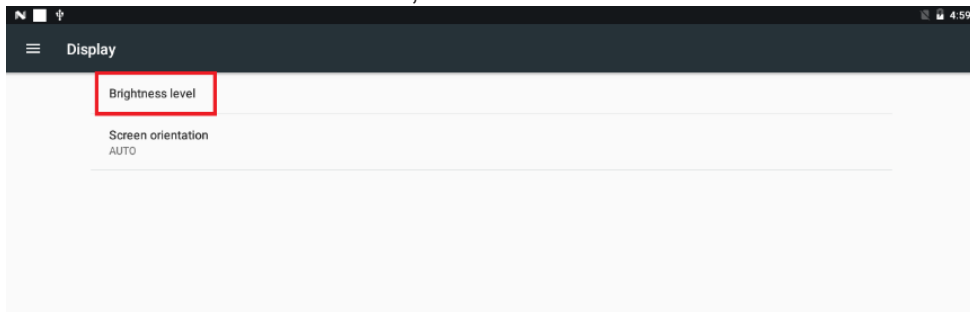

(Fig. 2.10.6)

4. Select your preferred angle from the menu. Selecting **Auto-rotate** allows the display to rotate along with the digital poster automatically.

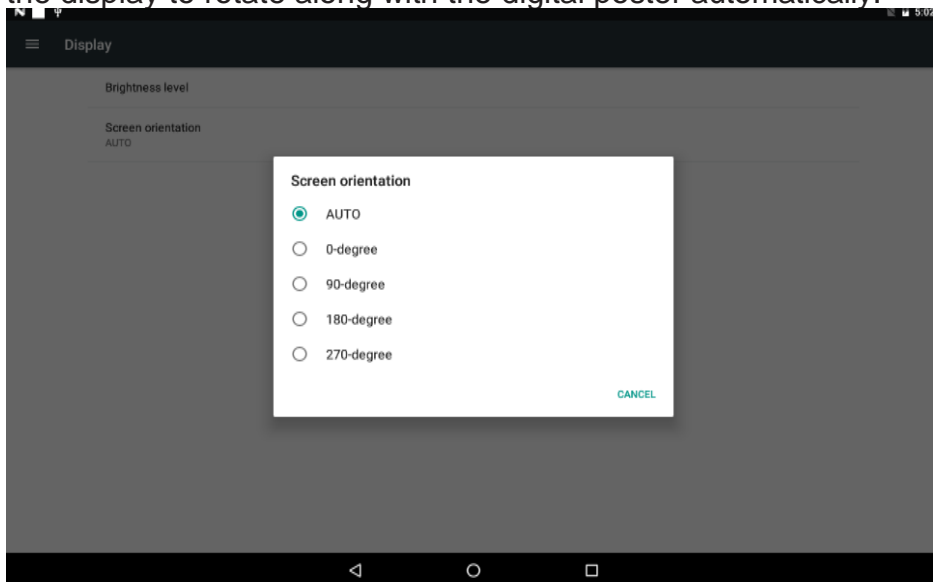


(Fig. 2.10.7)

2.11. Sound settings


To control the output sound volumes and touch sounds:

1. Click on the **Advanced** button. The advanced configuration menu will be launched. (Fig. 2.6.1)
2. Click on **Display/sound**, and then click on **Sound**. The Sound Settings page will be launched.

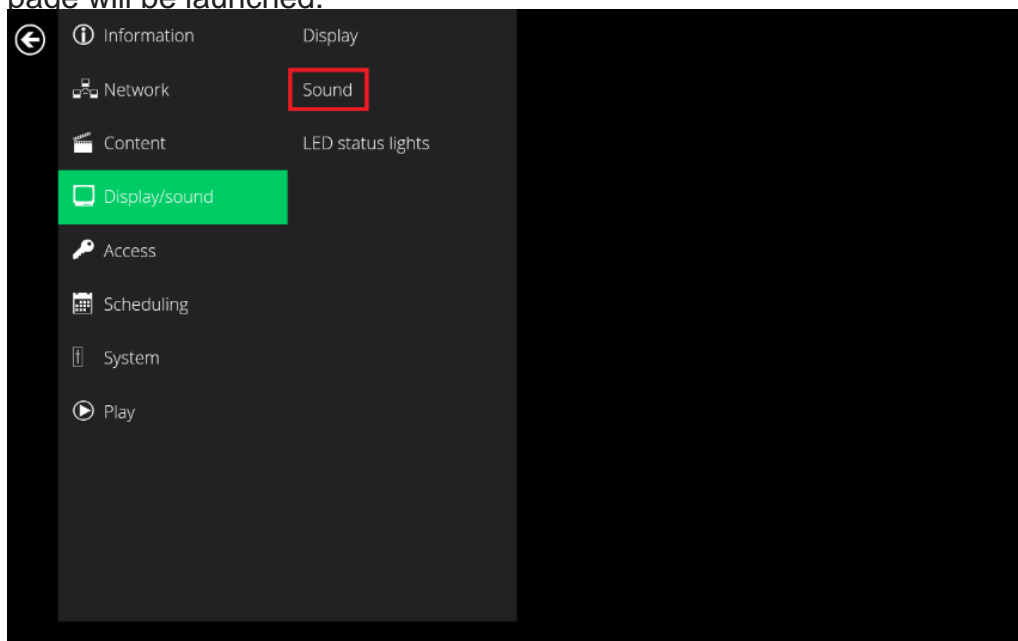

(Fig. 2.11.1)

3. Click on **Sound**, the Sounds settings page will be launched. Drag the green dots to adjust the volumes for the selected item, and then click **OK** to save the new settings.

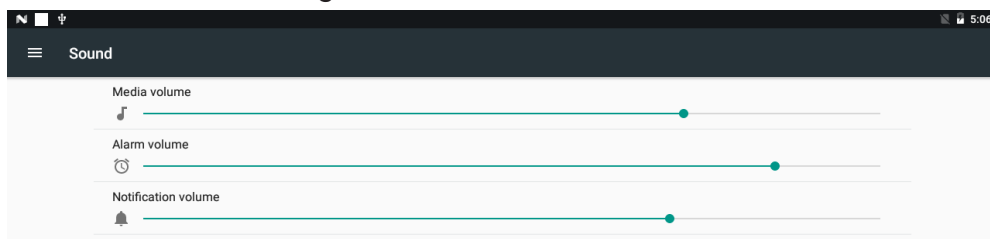


(Fig. 2.11.2)

2.12. Access configuration – Player name

The player's name can be specified so the player can be easily recognized in the management software. (Management software support is required).


1. Click the **Advanced** button, advanced configuration menu will be launched.
2. Click on **Access**, and click on **Player name**.
3. Input a name for the field and click **Set**.

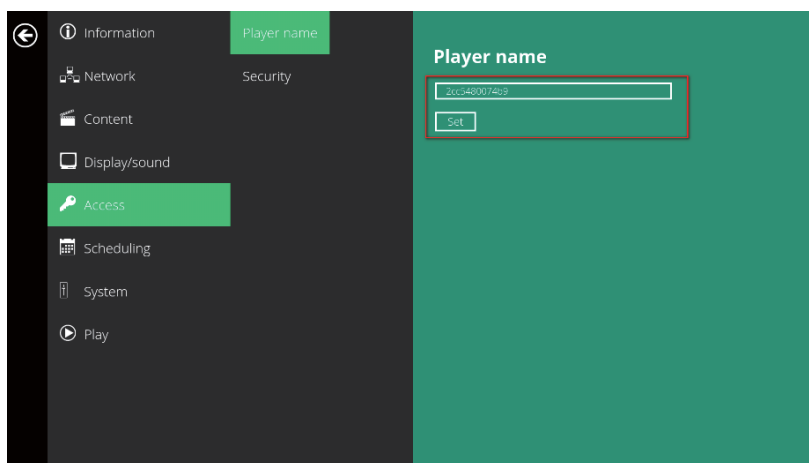

2.13. Access configuration – Security


A password can be set to provide authentication for player access. If the password is set, a password prompt will appear if a user is trying to enter the Basic settings menu from playback.

1. Click the **Advanced** button, advanced configuration menu will be launched.
2. Click on **Access**, and click on **Security**.
3. Input a password in the field and click **Set**.

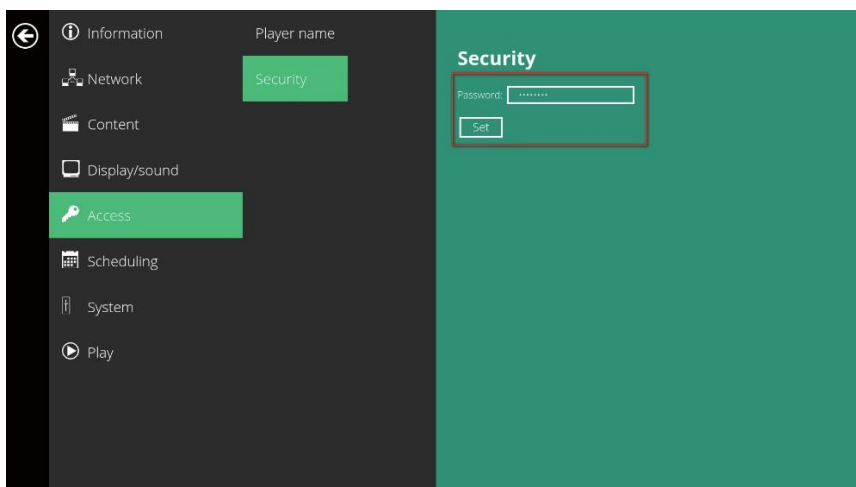


2.14. System configuration – Time and Date

This will bring up Date and time configuration panel as shown below, user can set time as auto or manual, set time zone and time format from here.

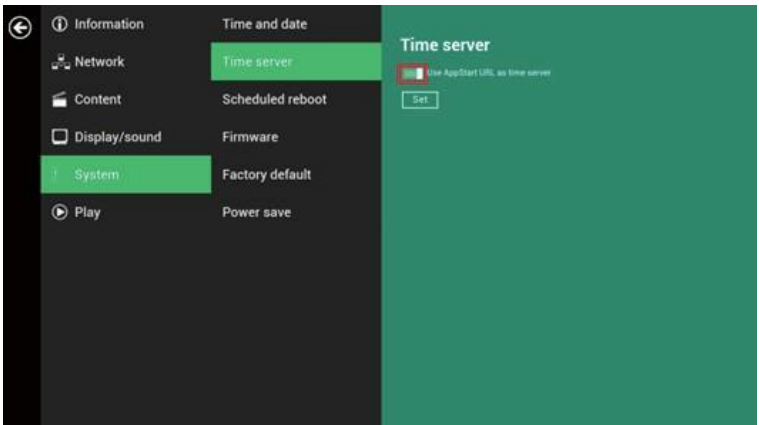

(Fig. 2.14.1)

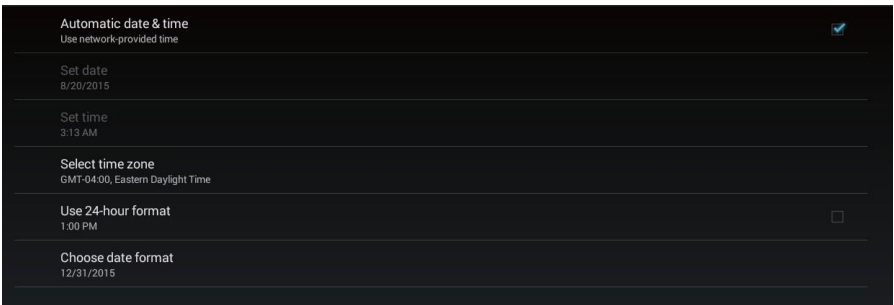


(Fig. 2.14.2)

2.15. System configuration – Time Server

This feature allows the user to synchronize the player's time with the webserver that is hosting the URL within the AppStart.

1. Click on the **Advanced** button. The advanced configuration menu will be launched. (Fig. 2.6.1)
2. Click on **Scheduling**, and then click on **Time Server**.
3. Click on the **Use AppStart URL as time server** button to enable/disable the time server function.
bled: Player don't synchronize with any server.
4. **Disabled:** Player does not synchronize with any server.
Default: Player synchronize it's time with Android default time server(pool.ntp.org).
Use AppStart URL as time server: Player synchronizes time with the web server where the AppStart URL is hosted (based on the https response header time).
Customized: Player synchronize it's time with customized time server
5. Click on **Set** to save your setting.
6. Click on **Set** to save your setting.

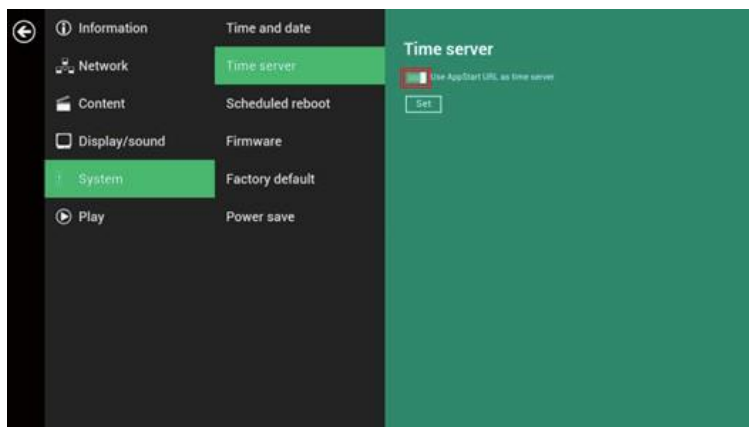


(Fig. 2.15.1)

2.16. System configuration – Scheduled reboot

Scheduled Reboot allows the digital poster to reboot at an assigned time automatically every day.

1. Click on the **Advanced** button. The advanced configuration menu will be launched. (Fig. 2.6.1)
2. Click on **Schedule**, and then click on **Scheduled Reboot**.
3. Click on the **Enable daily reboot** button to enable/disable the daily reboot function. Click on the dialogue box to set the time. The value can be inputted by using the pop-up keyboard or a USB keyboard.
4. Click on **Set** to save your setting.

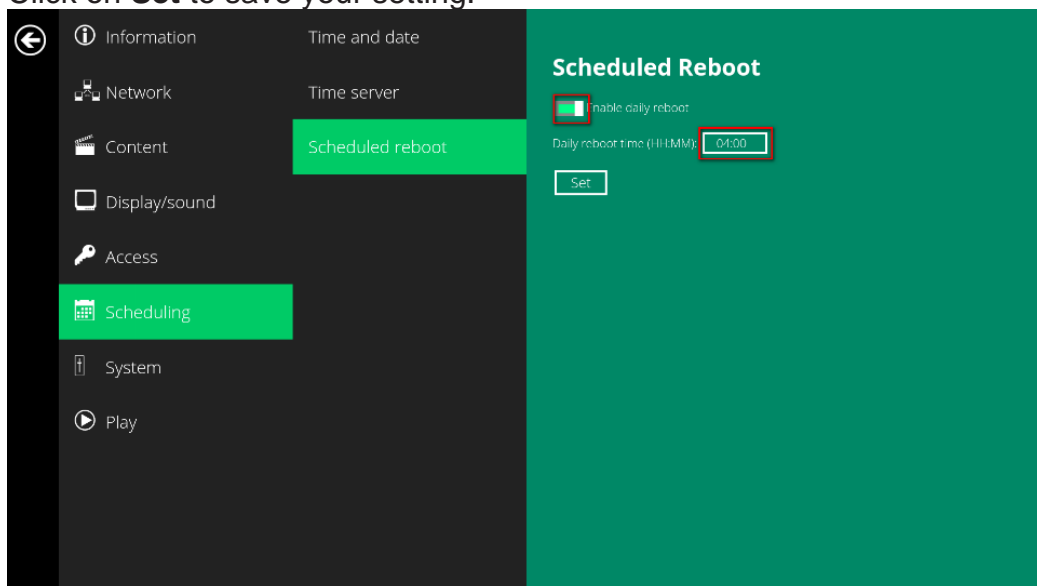

(Fig. 2.16.1)


2.17. System configuration - Firmware Update

Firmware updates can be performed by using a USB flash drive. Please read the release notes carefully regarding the changes that will be made to your digital poster before applying the upgrade.

IMPORTANT: **DO NOT** unplug the USB drive or turn off the digital poster while the system is performing a firmware update.


Check latest firmware from internet

1. Click **Check latest firmware from internet**.

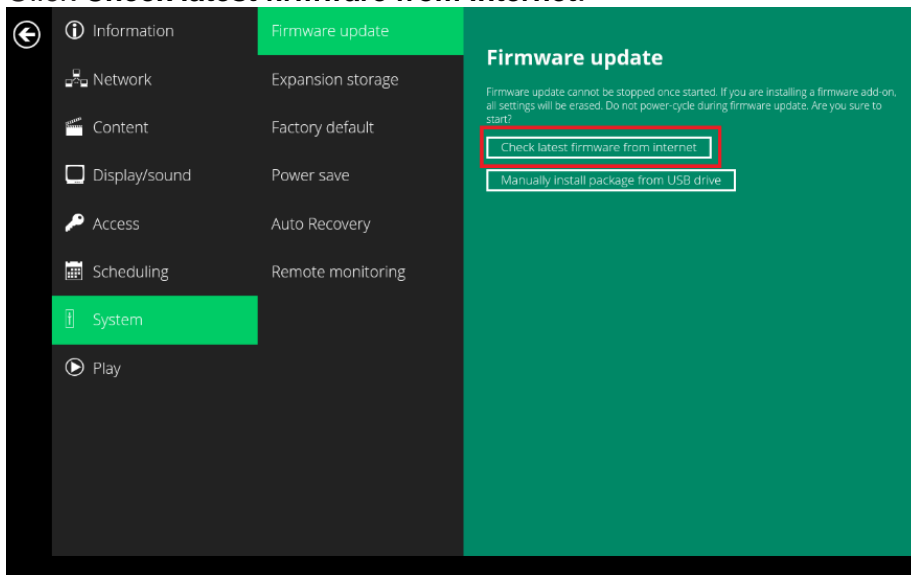

(Fig. 2.17.1)


2. Click **Update from internet** to begin the firmware update.

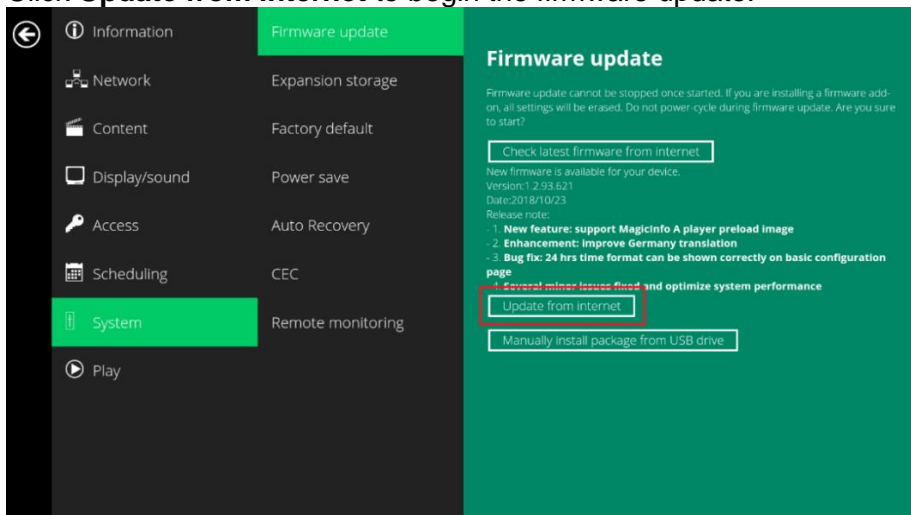

(Fig. 2.17.2)


Manually install package from USB drive

1. Download the latest firmware and copy it to the root directory of a USB drive.
2. Plug the power cord into the device.
3. Plug in a USB mouse to the device to enter the Basic settings menu.
4. Click on the **Advanced** button. The advanced configuration menu will be launched. (Fig. 2.6.1)
5. Click on **System**, and then choose **Firmware**.
6. Click on **OK** to start the firmware update process.

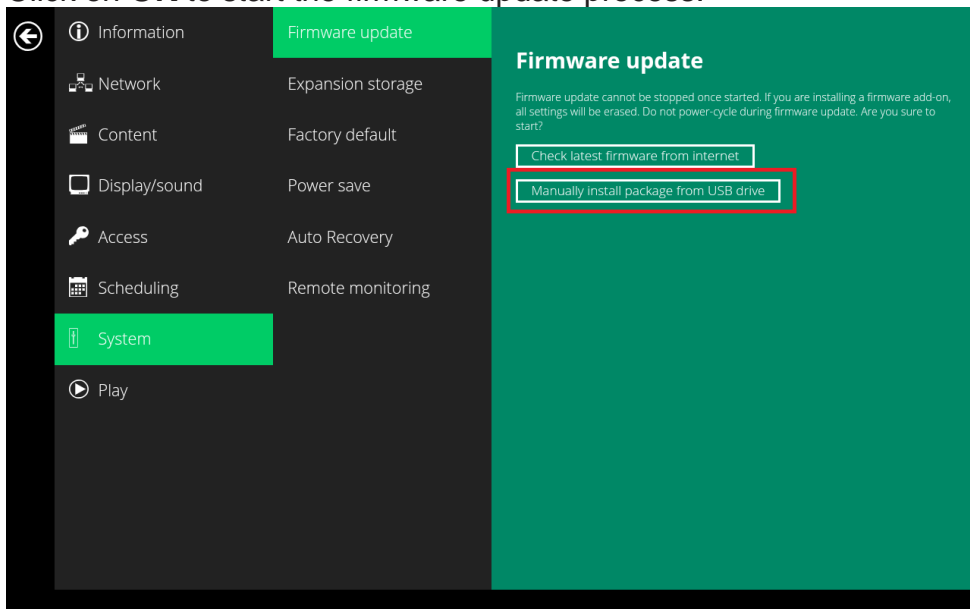

(Fig. 2.17.3)

7. Plug in the USB drive once the screen reads **Scanning USB drives for firmware package**.

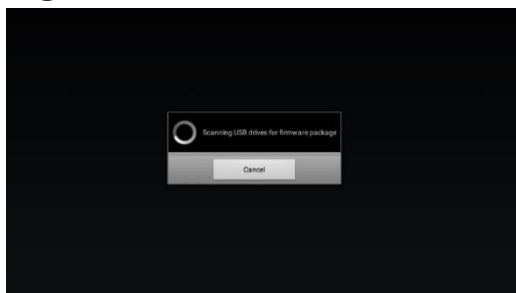

(Fig. 2.17.4)

2.18. System configuration - Factory reset

If you forget your preset system password, you must reset the system to regain access to the digital poster.


Using the reset button

1. **PRESS** and **HOLD** the reset button with a pin.
2. **RECONNECT** the power cord.
3. **WAIT** for 16 seconds or until the status LED flashes.
4. **RELEASE** the reset button and wait for system to initialize.

Using a USB mouse

System reset will re-initialize the system, clear passwords, and return settings to their default values. Then, perform the following steps:

1. **CONNECT** a USB mouse.
2. Click on the **Advanced** button. The advanced configuration menu will be launched. (Fig. 2.6.1)
3. Click on **System** configuration, and then choose **Factory default**.
4. Click on **OK** button to reset to factory default.

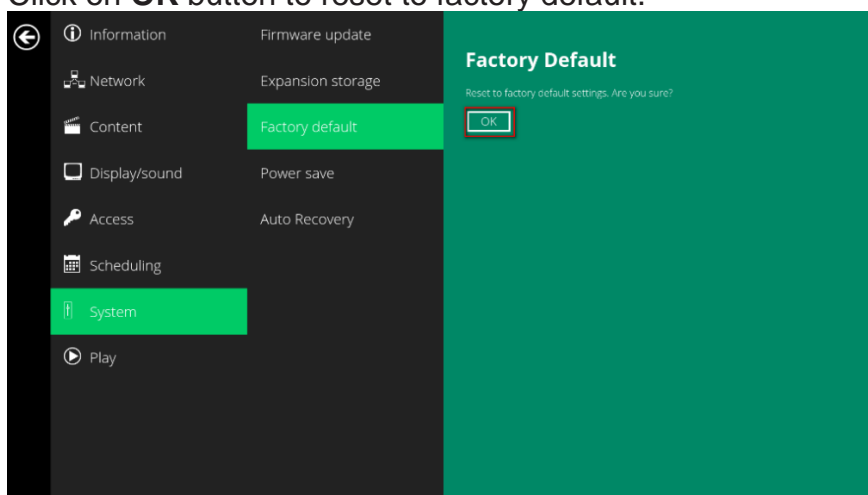


(Fig. 2.18.1)

2.19. System configuration – Power save

Power save allows the digital poster to power off automatically from the Basic settings page if no actions occur after 10 minutes.


1. Click on the **Advanced** button. The advanced configuration menu will be launched. (Fig. 2.6.1)
2. Click on **System**, and then click on **Power save**.

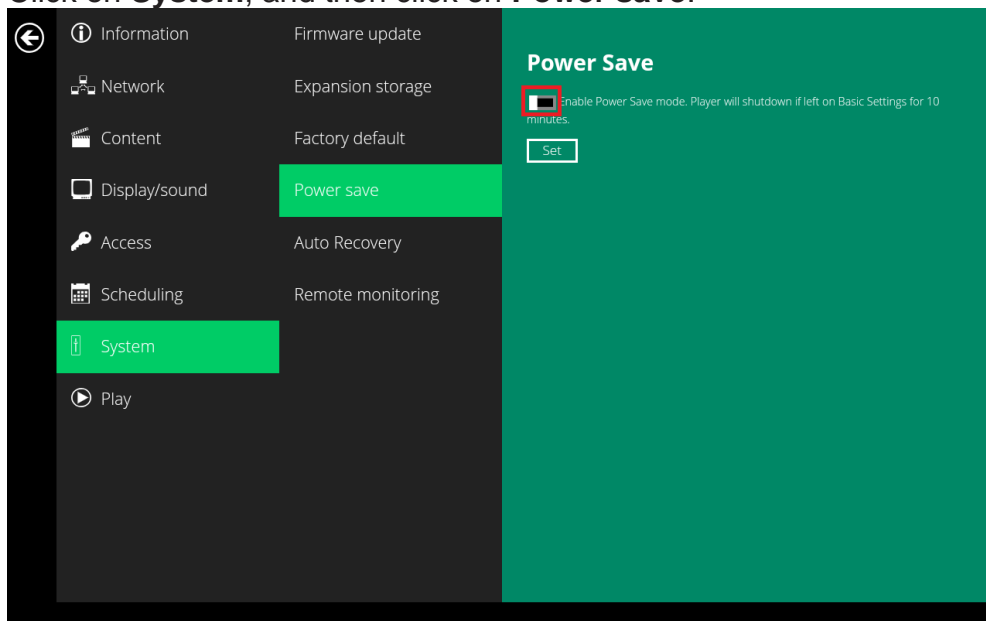

(Fig. 2.19.1)

2.20. System configuration – Auto Recovery

The Auto Recovery feature is designed to automatically re-launch appStart program if it closes unexpectedly, disabling this feature may cause screen to show initial menu if content crash.

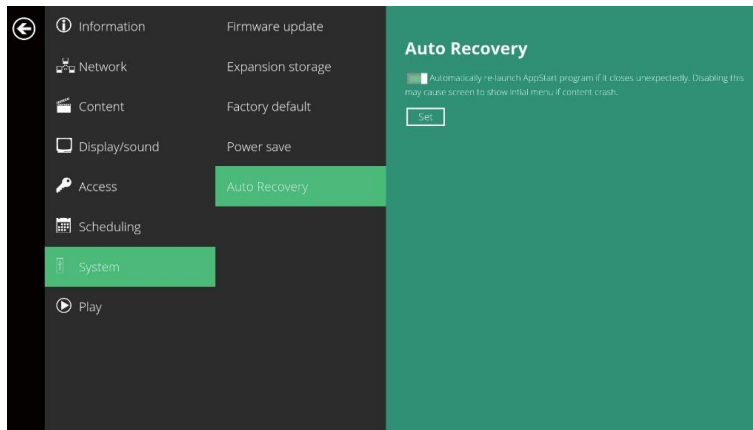


(Fig. 2.20.1)

2.21. System configuration – Expand Storage

User can add extra MicroSD card to replace the internal storage, please note when internal storage is being replaced, player can only use the storage from the MicroSD card as main storage.

Auto Expansion

1. In the Basic Settings menu, click the **Advanced** button, advanced configuration menu will be launched.
2. Click on **System**, click on **Expansion storage** and enable **auto-format**.
3. Insert the micro SD card and then check player information.
4. The device will now have an expanded storage capacity.

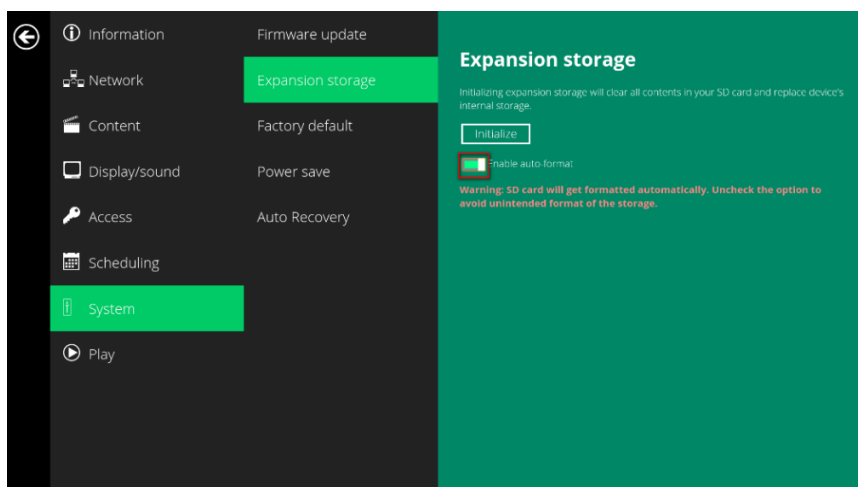

(Fig. 2.21.1)

3. Expansion Port Guide

This guide provides information of connecting EPT1052T with extensive devices for expanding applications. The firmware version should be 3.2.1-38 or newer.


3.1 Wiring Access for Access Control

This guide provides information of connecting EPT1052T with extensive devices for expanding applications. The firmware version should be 3.2.1-38 or newer.

1. Enter Settings and click on “Expansion Port”

2. Click on “Expansion Port”

3. Choose “Wiegand reader”

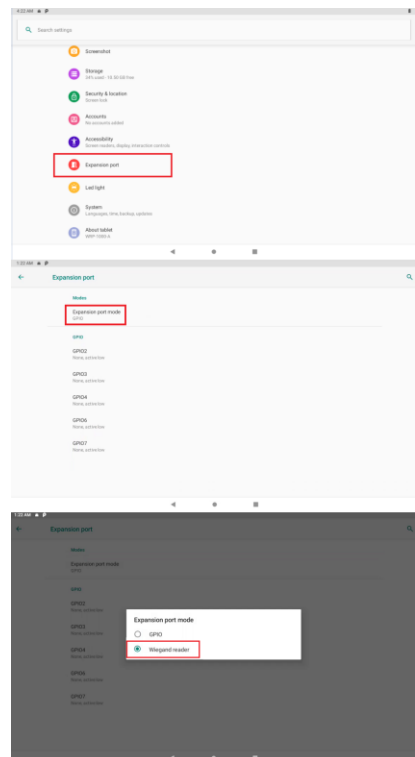

3.2 Expansion port connection for access control (version -A and -T only)

Pin definition:

GPIO


Pin	Signal	Type	Function
1	+5V	Output	5VDC power output
2	GPIO2	Input, internal pull-up Output, open-drain	General purpose input or output
3	GPIO3	Input, internal pull-up Output, open-drain	General purpose input or output
4	GPIO4	Input, internal pull-up Output, open-drain	General purpose input or output
5	GND	Reference	Ground
6	GPIO6	Input, internal pull-up Output, open-drain	General purpose input or output
7	GPIO7	Input, internal pull-up Output, open-drain	General purpose input or output

Signal	Parameter	Minimum	Typical	Maximum	Unit
+5V	Output voltage		5		V
	Output current			250	mA
GPIO2 GPIO3 GPIO4 GPIO6 GPIO7	Low level output voltage		0		V
	Low level output current			12	mA
	High level input voltage	2.11		5	V
	Low level input voltage	-0.5		0.79	V

Wiegand reader


Pin	Signal	Type	Function
1	+5V	Output	5VDC power output
2	D0	Output, open-drain	Wiegand data 0
3	D1	Output, open-drain	Wiegand data 1
4	LED1	Input, internal pull-up	LED light indication 1
5	GND	Reference	Ground
6	LED2	Input, internal pull-up	LED light indication 2
7	BEEPER	Input, internal pull-up	Beeper indication

Signal	Parameter	Minimum	Typical	Maximum	Unit
+5V	Output voltage		5		V
	Output current			250	mA
D0 D1	Low level output voltage		0		V
LED1 LED2 Beeper	High level input voltage	2.11		5	V
	Low level input voltage	-0.5		0.79	

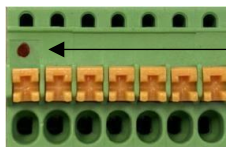

Red dot indicates +5V

Illustration of pin connection:

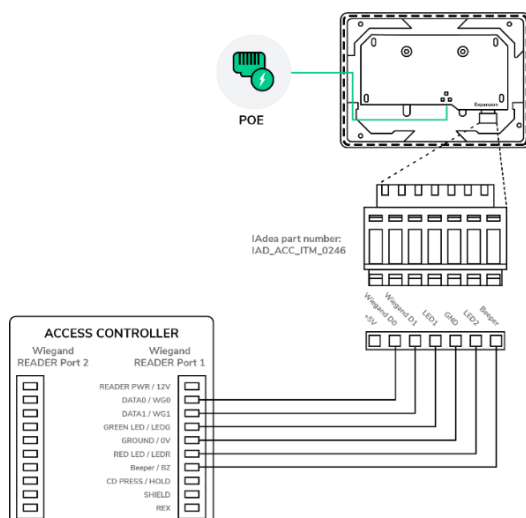

Note: The Access Control reader PIN layout shown above is for reference only. Please refer to your Access Control reader documentation for its exact PIN layout.

Warning: Wiring the EPT1052T incorrectly may permanently damage the EPT1052T. Please ensure the wiring is correct before powering on the devices.

4. Content Management

The EP1052T is designed to work with 3rd party management solutions. Please refer to the printed guide for related set up instructions.

5. Authoring in HTML5



A major advancement in the EP1052T media appliance is the ability to playback HTML5 content which can contain dynamic information.

6. Working with SMIL

The EP1052T uses open communications protocols for content presentation and playback control. SMIL-compliance means predictable results across multiple devices, and SMIL's non-proprietary nature means that your investments are never obsolete.

6.1. Introduction

Using SMIL (pronounced “smile”), the language created by W3C for multimedia communications, the media player understands the language “spoken” by professional tools from companies such as Adobe, Apple, Microsoft, and Real Networks. What this means is quicker, easier, and better integration of your players into your digital signage networks, opening up avenues of software controls and realizing the full potential of your player hardware down the road.



Microsoft®

Adobe

6.2. www.a-smil.org for developers

The media player operating system utilizes W3C SMIL as the underlying scripting language, which lends well to customization to your project management needs. For resources, downloads, and community support, please visit www.a-smil.org.

7. Technical Data

7.1. Specifications

Display	10.1" LCD panel 10 points capacitive multi-touch 350 nits maximum brightness 1280 x 800 (Full HD) panel resolution Viewing angle (H/V): 80/80 Surround LED
Internal player	Processor: Octa-core Cortex-A53 System Memory: 2.0 GB Flash memory: 16 GB eMMC built-in
Video format support	H.264/AVC up to 1080p (1920 x 1080) H.265/HEVC up to 1080p (1920 x 1080) MPEG-4 up to 1080p (1920 x 1080) MPEG-2 up to 1080p (1920 x 1080) MPEG-1 up to 1080p (1920 x 1080) VC-1 up to 1080p (1920 x 1080)
Image format support	JPEG up to 1920 x 1080 PNG up to 1920 x 1080
Audio codec support	MP3 up to 320 Kbps
Open standards supported	W3C HTML5 (HTML, JavaScript, CSS) W3C SMIL 3.0 instructions (sub-set) Android 9.0 SDK
Interactivity	Expansion port for GPIO & door access control (ver. -A and -H only) 13.56 MHz NFC (ver. -L and -A only) HID reader 13.56 MHz & 125 KHz RFID (ver. -H only)

I/O	SD card slot (expandable to 128 GB) Micro USB for ADB (Android Debug Bridge) 3.5 mm audio out USB 2.0 x 2 Ethernet port x 1 Power jack x 1 Embedded wireless antenna (2.4GHz & 5GHz) Built-in stereo speaker 2 W x 1 AEC microphone x 1 (ver. -A and -H only) Front camera: 8 MP Auto Focus (ver. -A and -H only)
Supplied accessories	Flush mount bracket and screws Glass mount 3M tape Glass cover sheet Mount sheet Quick start guide
Power requirement	Input: AC 100 - 240 V, 50 - 60 Hz, 0.7 A max Output: 12 V / 2 A IEEE 802.3at Power-over-Ethernet (PoE+) UL / CB certified power supplies
Power consumption	Max. 20.3 W
Environmental	Operating temperature: 0 – 40 °C / 32 – 104 °F Humidity: 10 – 85 % @ 40 °C / 104 °F non-condensing
System dimension	261.1x180.9x28.9 mm (10.28" x 7.12" x 1.14")
System weight	915 g (2.3 lbs)
Certifications	CE / FCC / RoHS
Warranty	1-year limited parts & labor* (varies based on region, contact sales for more details)

Available SKU	
EP1052T-L	Lite version without AEC microphone, AF camera and expansion port.
EP1052T-A	Standard version with NFC card reader embedded.
EP1052T-H	Elite version with HID reader module embedded.

8. Troubleshooting

What video format can I play?

Video files encoded in MPEG-4 AVC up to 1920x1080 resolutions and 10Mbps bitrates should play perfectly. If a certain video is not played as scheduled, or if it plays poorly, please search the support site for “transcode” instructions.

The digital poster is placed near my Wi-Fi access point, yet the connection is unreliable.

Wi-Fi appliances in general should be placed 10 feet (3 meters) from the Wi-Fi access point for reliable operation. Try relocating the access point further away from the digital posters to improve connection.

What can I do about the gap between video and video?

Video gaps (blank screen) occur before and after each video are played. To minimize the gap, avoid back to back video programming by scheduling an image between each video.

If both Ethernet & WiFi are connected, which one will take precedence?

If both connections are available, WiFi will be used.

What is the maximum file size for a single video file?

The maximum video file size for the EP1052T is 2GB. We recommend reserving a safety margin to avoid exceeding the limit (i.e. limiting files to 1850MB).

What should I do if I forgot my password?

In this case, please perform a factory reset.

Use the S/W RESET button located at the back of the digital poster to restore factory settings. This will also clear the digital poster's password.

How do I manage the playback of contents?

The media appliance is designed to be interoperable with leading 3rd party management software solutions or via SMIL open standard commands.

Could the digital poster display Flash or Microsoft PowerPoint presentations?

The digital poster features limited PowerPoint support, but not Flash support.

While PCs can play many formats with varying degrees of success, RISC-based digital poster are designed to reliably play specific video formats (Please see spec for details). While Microsoft PowerPoint native files could not play directly on a RISC-based digital poster, the file is converted through other software (i.e. Adfotain Manager Express) into an image format to be played as an image slideshow.

Why won't some media files play properly?

The video data bit-rate used may have exceeded the recommended bit rate.

The video data bit-rate is the amount of video or audio data used per second to store or play the contents, usually expressed in Mbps (mega-bits per second). Video encoded with excessive bit-rates will not playback smoothly in the media digital poster, likely due to storage I/O bottleneck.

Some JPEG images cannot be played in the digital poster.

Progressive JPEG are not supported. Please convert to baseline JPEG for maximum compatibility.

JPEG images can be either of 2 types: baseline or progressive compression. Baseline JPEG offers greatest compatibility, while progressive JPEGs are suitable for web site images. Progressive images are downloaded and displayed "progressively," being rendered more clearly as more data is received over the internet. Progressive images are primarily supported on PCs. For media appliances, make sure to save images as baseline JPEG in your photo editor, or resave them as baseline JPEGs using free tools such as IrfanView (<http://www.irfanview.com/>).

The digital poster is not playing. What should I do?

Play list errors and scheduling issues are two major causes of playback problems. To determine if the problem is caused by a bad play list, just delete the play list and restart digital poster. The digital poster should loop through all media files, indicating a fault with the play list.

If the playback is scheduled to play at specific time, check to see if the device is set to the right time zone on the world clock. When nothing seems wrong, the time zone setting is often the reason the program is not played.

Customer Support

For technical support or product service, see the table below or contact your reseller.

Note: You will need the product serial number.

Country/Region	Website	T= Telephone C = CHAT ONLINE	Email
Australia New Zealand	www.viewsonic.com.au	AUS= 1800 880 818 NZ= 0800 008 822	service@au.viewsonic.com
Canada	www.viewsonic.com	T (Toll-Free)= 1-866-463-4775 T (Toll)= 1-424-233-2533	service.ca@viewsonic.com
Europe	www.viewsoniceurope.com	www.viewsoniceurope.com/uk/support/call-desk/	
Hong Kong	www.hk.viewsonic.com	T= 852 3102 2900	service@hk.viewsonic.com
India	www.in.viewsonic.com	T= 1800 419 0959	service@in.viewsonic.com
Korea	ap.viewsonic.com/kr/	T= 080 333 2131	service@kr.viewsonic.com
Latin America (Argentina)	www.viewsonic.com/la/	C= http://www.viewsonic.com/la/soporte/servicio-tecnico	soporte@viewsonic.com
Latin America (Chile)	www.viewsonic.com/la/	C= http://www.viewsonic.com/la/soporte/servicio-tecnico	soporte@viewsonic.com
Latin America (Columbia)	www.viewsonic.com/la/	C= http://www.viewsonic.com/la/soporte/servicio-tecnico	soporte@viewsonic.com
Latin America (Mexico)	www.viewsonic.com/la/	C= http://www.viewsonic.com/la/soporte/servicio-tecnico	soporte@viewsonic.com
Nexus Hightech Solutions, Cincinnati #40 Desp. 1 Col. De los Deportes Mexico D.F. Tel: 55) 6547-6454 55)6547-6484 Other places please refer to http://www.viewsonic.com/la/soporte/servicio-tecnico#mexico			
Latin America (Peru)	www.viewsonic.com/la/	C= http://www.viewsonic.com/la/soporte/servicio-tecnico	soporte@viewsonic.com
Macau	www.hk.viewsonic.com	T= 853 2870 0303	service@hk.viewsonic.com
Middle East	ap.viewsonic.com/me/	Contact your reseller	service@ap.viewsonic.com
Puerto Rico & Virgin Islands	www.viewsonic.com	T= 1-800-688-6688 (English) C= http://www.viewsonic.com/la/soporte/servicio-tecnico	service.us@viewsonic.com soporte@viewsonic.com
Singapore/ Malaysia/Thailand	www.ap.viewsonic.com	T= 65 6461 6044	service@sg.viewsonic.com
South Africa	ap.viewsonic.com/za/	Contact your reseller	service@ap.viewsonic.com
United States	www.viewsonic.com	T (Toll-Free)= 1-800-688-6688 T (Toll)= 1-424-233-2530	service.us@viewsonic.com

Limited Warranty

VIEWSONIC Network Media Player

What the warranty covers:

ViewSonic warrants its products to be free from defects in material and workmanship, under normal use, during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:

ViewSonic Network Media Player are warranted for 1 year for labor from the date of the first customer purchase.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b. Repair or attempted repair by anyone not authorized by ViewSonic.
 - c. Causes external to the product, such as electric power fluctuations or failure.
 - d. Use of supplies or parts not meeting ViewSonic's specifications.
 - e. Normal wear and tear.
 - f. Any other cause which does not relate to a product defect.
3. Any product exhibiting a condition commonly known as "image burn-in" which results when a static image is displayed on the product for an extended period of time.

How to get service:

1. For information about receiving service under warranty, contact ViewSonic Customer Support (please refer to Customer Support page). You will need to provide your product's serial number.
2. To obtain warranted service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take or ship the product freight prepaid in the original container to an authorized ViewSonic service center or ViewSonic.
4. For additional information or the name of the nearest ViewSonic service center, contact ViewSonic.

Limitation of implied warranties:

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

Exclusion of damages:

ViewSonic's liability is limited to the cost of repair or replacement of the product. ViewSonic shall not be liable for:

1. Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
2. Any other damages, whether incidental, consequential or otherwise.
3. Any claim against the customer by any other party.



ViewSonic®